

User Manual

Revision 1.000
English

IEC 61850 Server / BACnet Slave - Converter

(Order Code: HD67738-IP-A1 , HD67738-MSTP-A1)

For Website information:

www.adfweb.com?Product=HD67738

For Price information:

www.adfweb.com?Price=HD67738-IP-A1

www.adfweb.com?Price=HD67738-MSTP-A1

Benefits and Main Features:

- ⊕ Very easy to configure
- ⊕ Triple Electrical isolation
- ⊕ Temperature range: -40°C/+85°C (-40°F/+185°F)



For other IEC 61850 products see also the following link:

Converter IEC 61850 Server to

www.adfweb.com?Product=HD67B82
www.adfweb.com?Product=HD67620
www.adfweb.com?Product=HD67733
www.adfweb.com?Product=HD67734
www.adfweb.com?Product=HD67735
www.adfweb.com?Product=HD67736
www.adfweb.com?Product=HD67737
www.adfweb.com?Product=HD67739
www.adfweb.com?Product=HD67740
www.adfweb.com?Product=HD67741
www.adfweb.com?Product=HD67743
www.adfweb.com?Product=HD67744
www.adfweb.com?Product=HD67745
www.adfweb.com?Product=HD67746
www.adfweb.com?Product=HD67747
www.adfweb.com?Product=HD67748
www.adfweb.com?Product=HD67749
www.adfweb.com?Product=HD67750
www.adfweb.com?Product=HD67751
www.adfweb.com?Product=HD67752
www.adfweb.com?Product=HD67753
www.adfweb.com?Product=HD67754
www.adfweb.com?Product=HD67755
www.adfweb.com?Product=HD67756
www.adfweb.com?Product=HD67765

(PROFINET Master)
(S7comm)
(Modbus Master)
(Modbus Slave)
(Modbus TCP Master)
(Modbus TCP Slave)
(BACnet Master)
(CAN)
(CANopen)
(DeviceNet Master)
(EtherNet/IP Master)
(EtherNet/IP Slave)
(J1939)
(KNX)
(MQTT)
(NMEA0183)
(NMEA2000)
(PROFIBUS Master)
(PROFIBUS Slave)
(PROFINET Slave)
(SNMP Manager)
(SNMP Agent)
(Serial)
(Ethernet)
(EnOcean)

Do you have your customer protocol? Then go to:
www.adfweb.com?Product=HD67003

Do you need to choose a device? Do you want help?
www.adfweb.com?Cmd=helpme



User Manual

INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	7
CONFIGURATION	7
POWER SUPPLY	8
FUNCTION MODES	9
LEDS	10
ETHERNET	11
RS485 (FOR BACNET MS/TP)	12
USE OF COMPOSITOR SW67738	13
NEW CONFIGURATION / OPEN CONFIGURATION	14
SOFTWARE OPTIONS	15
SET COMMUNICATION	17
IEC 61850 ACCESS	21
SET BACNET ACCESS	22
TLS KNOWN CERTIFICATE	24
BACNET EDE FILE	24
UPDATE DEVICE	25
MECHANICAL DIMENSIONS	27
ORDERING INFORMATIONS	28
ACCESSORIES	28
DISCLAIMER	29
OTHER REGULATIONS AND STANDARDS	29
WARRANTIES AND TECHNICAL SUPPORT	30
RETURN POLICY	30

UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- Updated
- Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page www.adfweb.com/download/ and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

REVISION LIST:

Revision	Date	Author	Chapter	Description
1.000	18/09/2020	Ff	All	First Release

WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning.
ADFweb.com is not responsible for any error this manual may contain.

TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

SECURITY ALERT:**GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

INTENDED USE

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

QUALIFIED PERSONNEL

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

RESIDUAL RISKS

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

CE CONFORMITY

The declaration is made by our company. You can send an email to support@adfweb.com or give us a call if you need it.

EXAMPLES OF CONNECTION:

IEC 61850 / BACnet - Converter
HD67738-xxx-A1

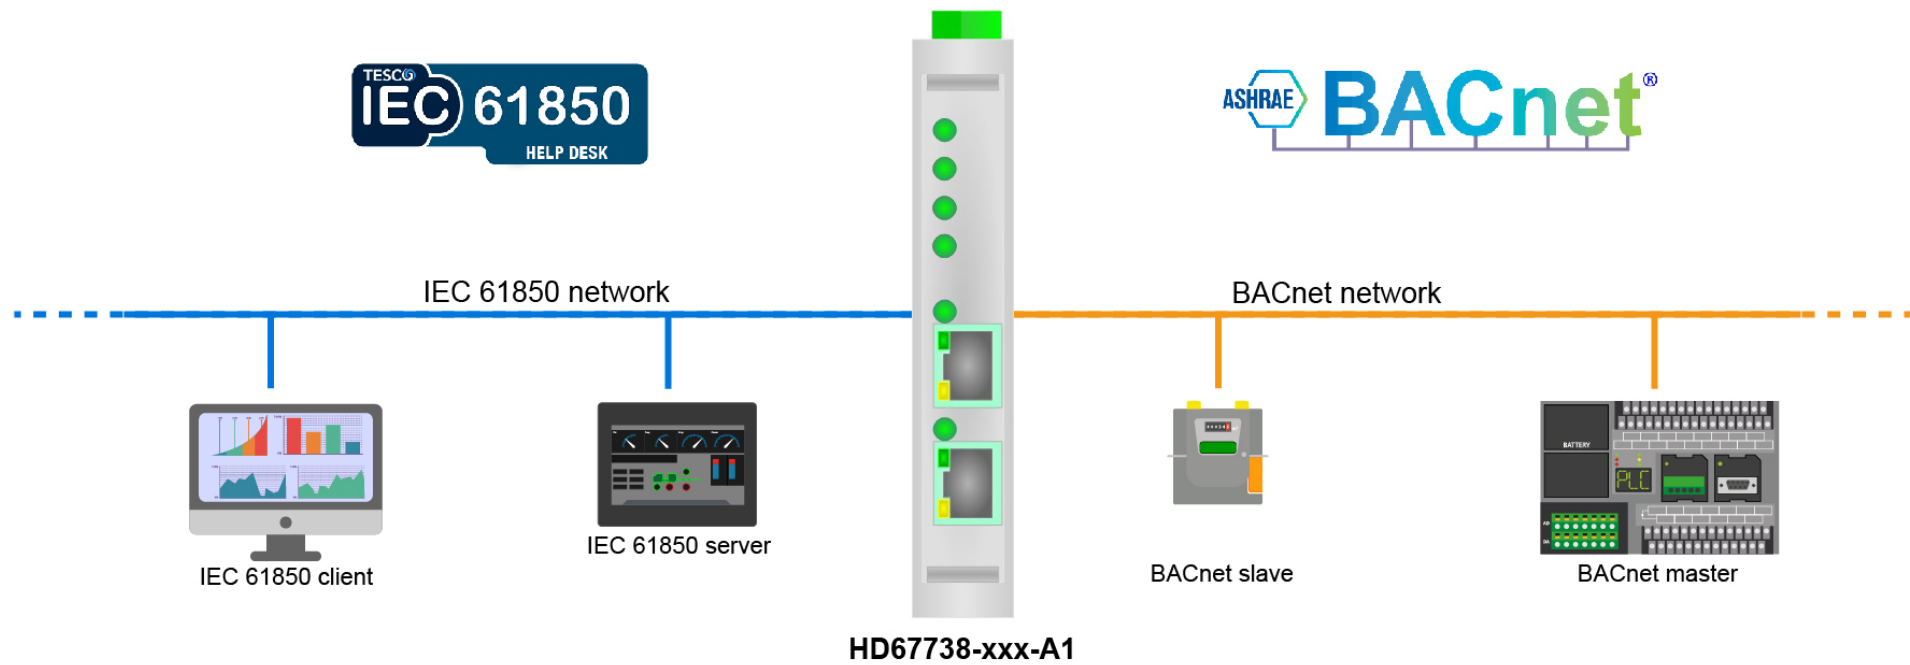

ADFweb.com



+39 0438 309 131



+39 349 440 9592



support@adfweb.com

CONNECTION SCHEME:

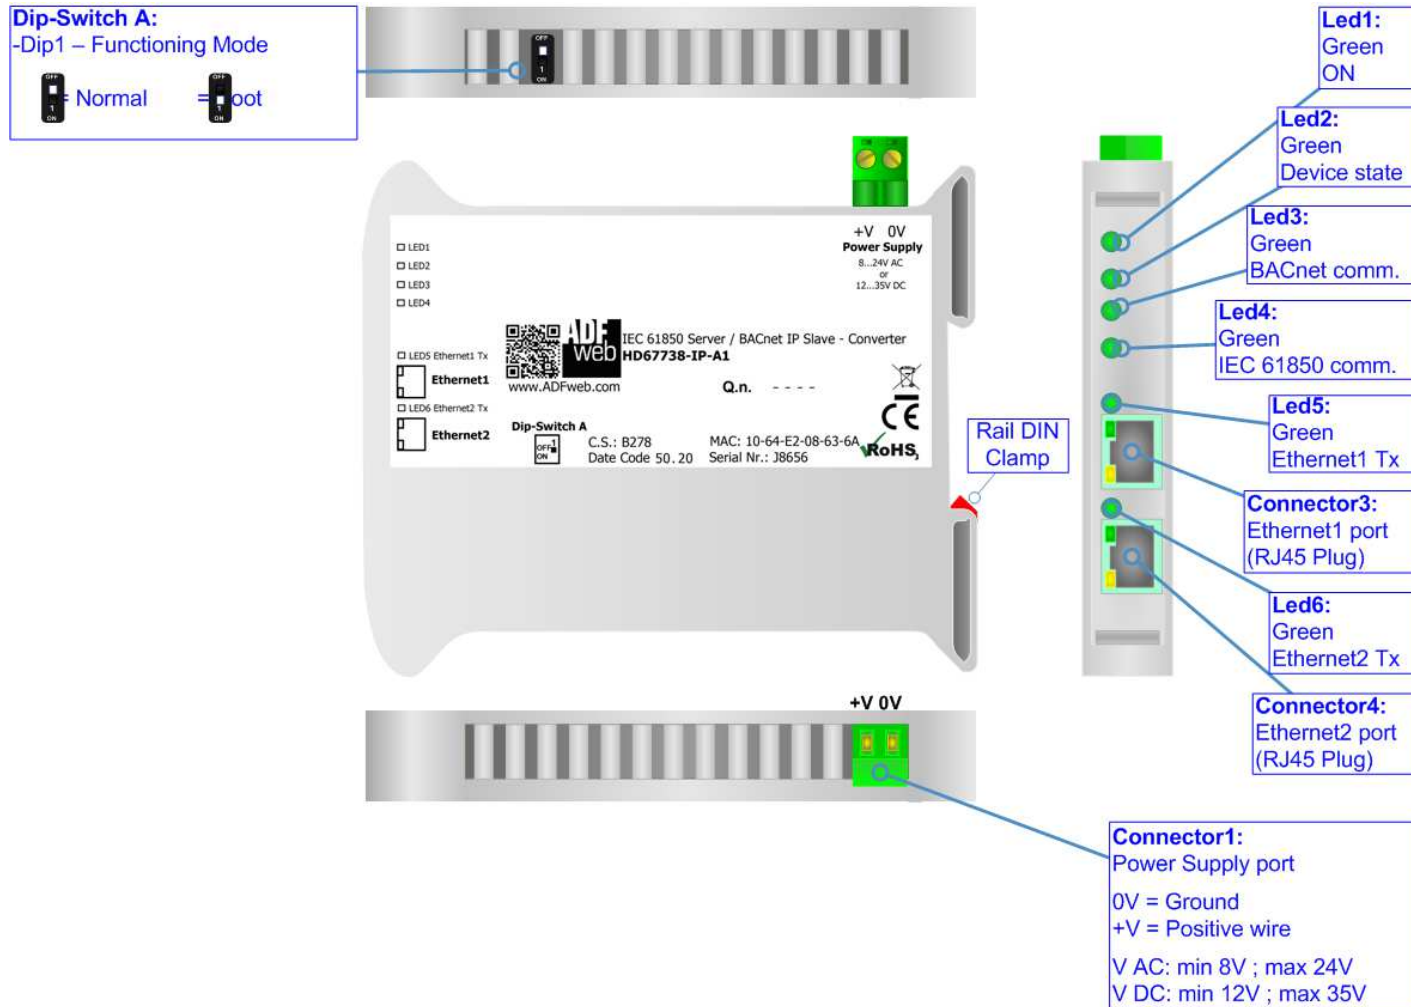


Figure 1a: Connection scheme for HD67738-IP-A1

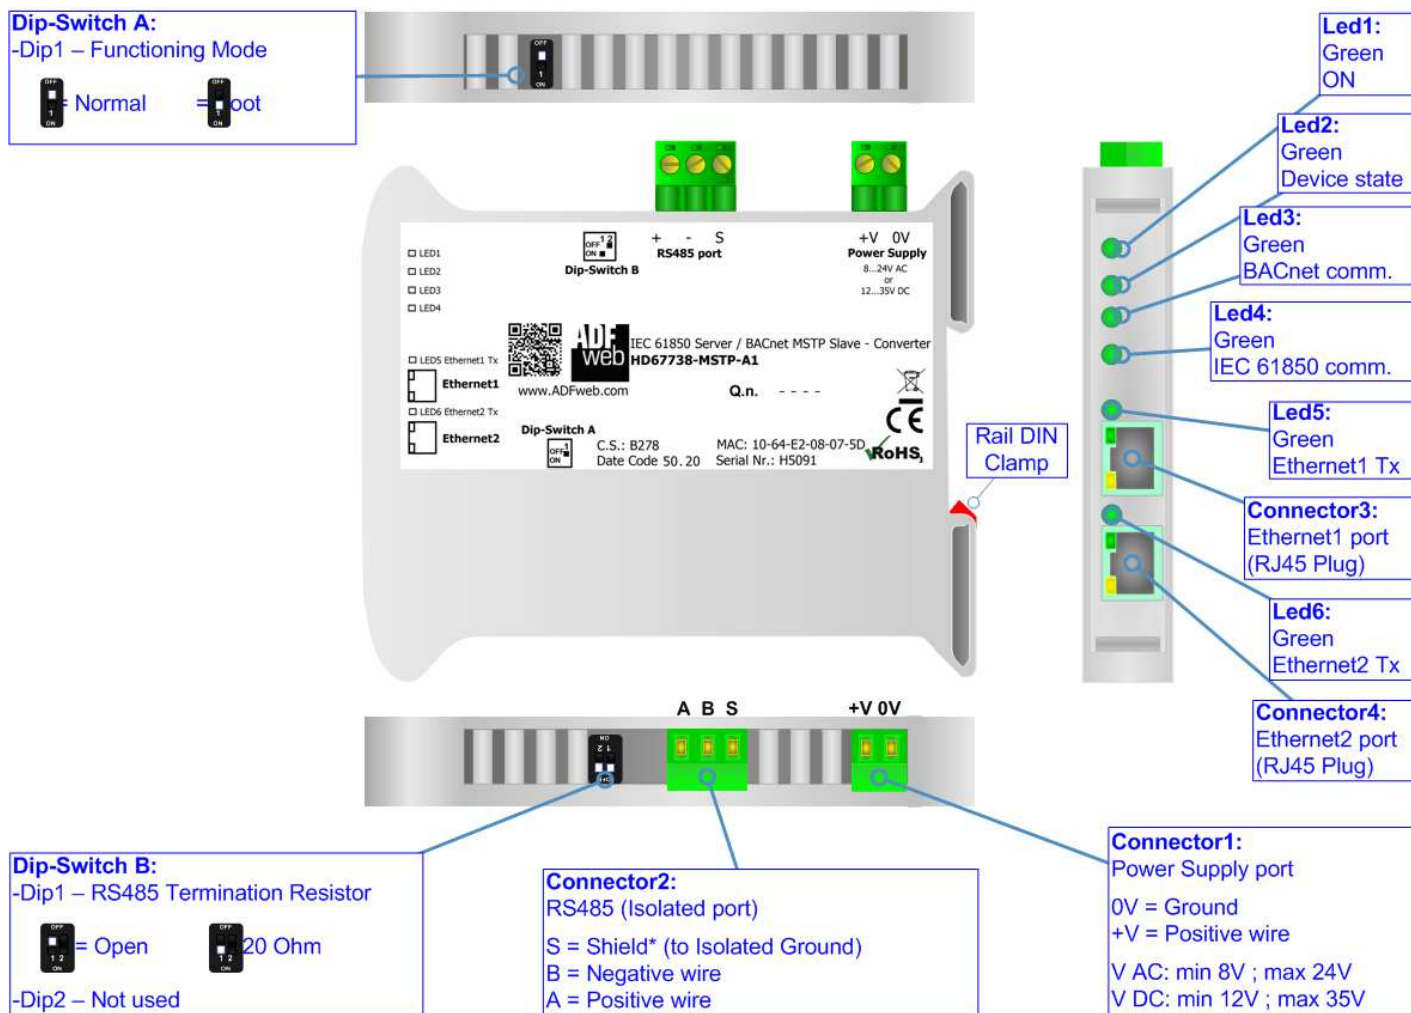


Figure 1b: Connection scheme for HD67738-MSTP-A1

CHARACTERISTICS:

The HD67738-xxx-A1 are IEC 61850 / BACnet - Converters.

It allows for the following characteristics:

- Triple isolation between RS232/RS485/RS422 - Power Supply, RS232/RS485/RS422 - Ethernet, Ethernet - Power Supply;
- Two-directional information between IEC 61850 bus and BACnet bus;
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 8...24V AC or 12...35V DC;
- Wide temperature range: -40°C / 85°C [-40°F / +185°F].



CONFIGURATION:

You need Compositor SW67738 software on your PC in order to perform the following:

- Define the parameters of IEC 61850 line;
- Define the parameters of BACnet line;
- Define IEC 61850 variables that contains the data written by the BACnet Master;
- Define IEC 61850 variables that contains the data to make available to the BACnet Master;
- Define BACnet objects accessible by the external BACnet Master;
- Export the EDE file for configuration of BACnet Master;
- Update the device.

POWER SUPPLY:

The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.



VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V

Consumption at 24V DC:

Device	Consumption [W/VA]
HD67738-X-A1	3.5

Caution: Do not reverse the polarity power

Connector1:
Power Supply port
0V = Ground
+V = Positive wire
V AC: min 8V ; max 24V
V DC: min 12V ; max 35V

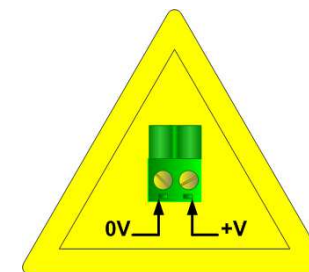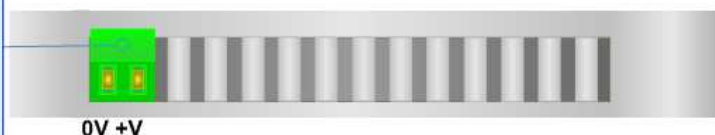

HD67738-X-A1


FUNCTION MODES:

The device has got two function modes depending on the position of the 'Dip1 of Dip-Switch A':

- The first, with 'Dip1 of Dip-Switch A' at "OFF" position, is used for the normal working of the device.
- The second, with 'Dip1 of Dip-Switch A' at "ON" position, is used for uploading the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.


According to the functioning mode, the LEDs will have specific functions, see 'LEDS' section.

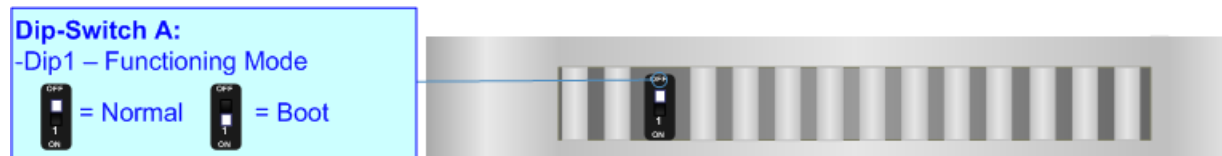

LEDS:


The device has got six LEDs that are used to give information about the functioning status.
The various meanings of the LEDs are described in the table below.

LED	Normal Mode	Boot Mode
1: ON [supply voltage] (green)	ON: Device powered OFF: Device not powered	ON: Device powered OFF: Device not powered
2: Device State (green)	Blinks slowly (~1Hz)	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
3: BACnet communication (green)	It blinks when a BACnet request is received	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
4: IEC 61850 communication (green)	It blinks when a IEC 61850 request is received	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
5: Ethernet1 Tx (green)	Blinks when is transmitting Ethernet frames	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress
6: Ethernet2 Tx (green)	Blinks when is transmitting Ethernet frames	Blinks quickly: Boot state Blinks very slowly (~0.5Hz): update in progress

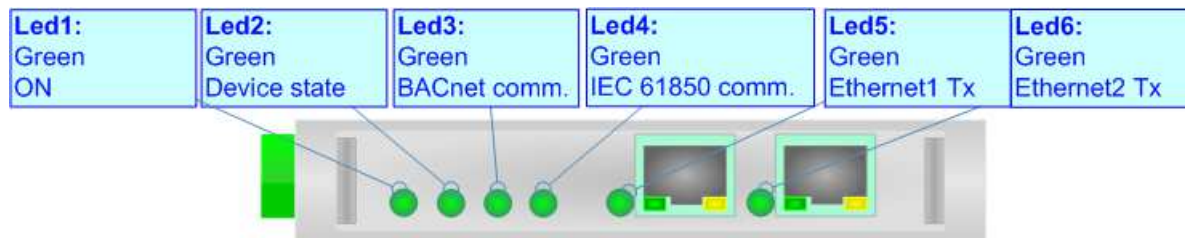


ETHERNET:

IEC 61850 connection, BACnet/IP connection and the updating of the converters must be made using Connector3 and/or Connector4 of the HD67738-XXX-A1 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC/PLC/other is recommended the use of a cross cable.

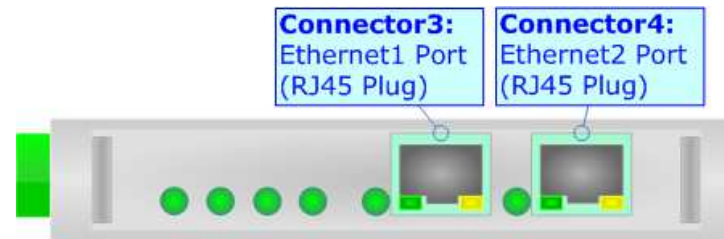

RS485 (for BACnet MS/TP):

For terminating the RS485 line with a 120Ω resistor it is necessary to put ON dip 1, like in figure.

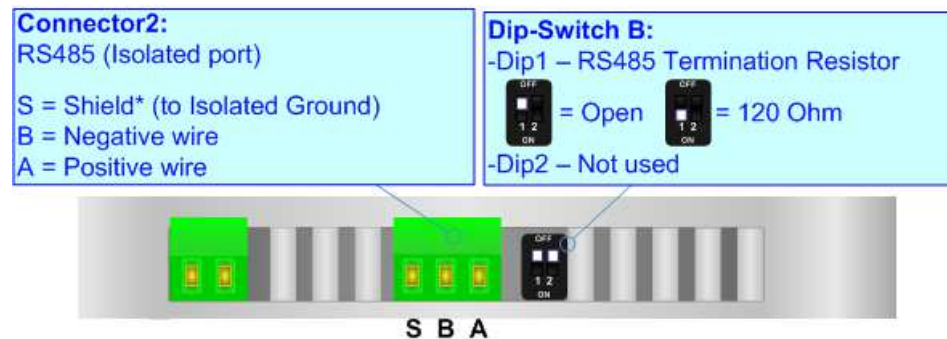

The maximum length of the cable should be 1200m (4000 feet).

Here some codes of cables:

- Belden: p/n 8132 - 2x 28AWG stranded twisted pairs conductor + foil shield + braid shield;
- Belden p/n 82842 - 2x 24AWG stranded twisted pairs conductor + foil shield + braid shield;
- Tasker: p/n C521 - 1x 24AWG twisted pair conductor + foil shield + braid shield;
- Tasker: p/n C522 - 2x 24AWG twisted pairs conductor + foil shield + braid shield.

USE OF COMPOSITOR SW67738:

To configure the Converter, use the available software that runs with Windows called SW67738. It is downloadable on the site www.adfweb.com and its operation is described in this document. *(This manual is referenced to the last version of the software present on our web site).* The software works with MSWindows (XP, Vista, Seven, 8, 10; 32/64bit).

When launching the SW67738, the window below appears (Fig. 2).



Note:

It is necessary to have installed .Net Framework 4.


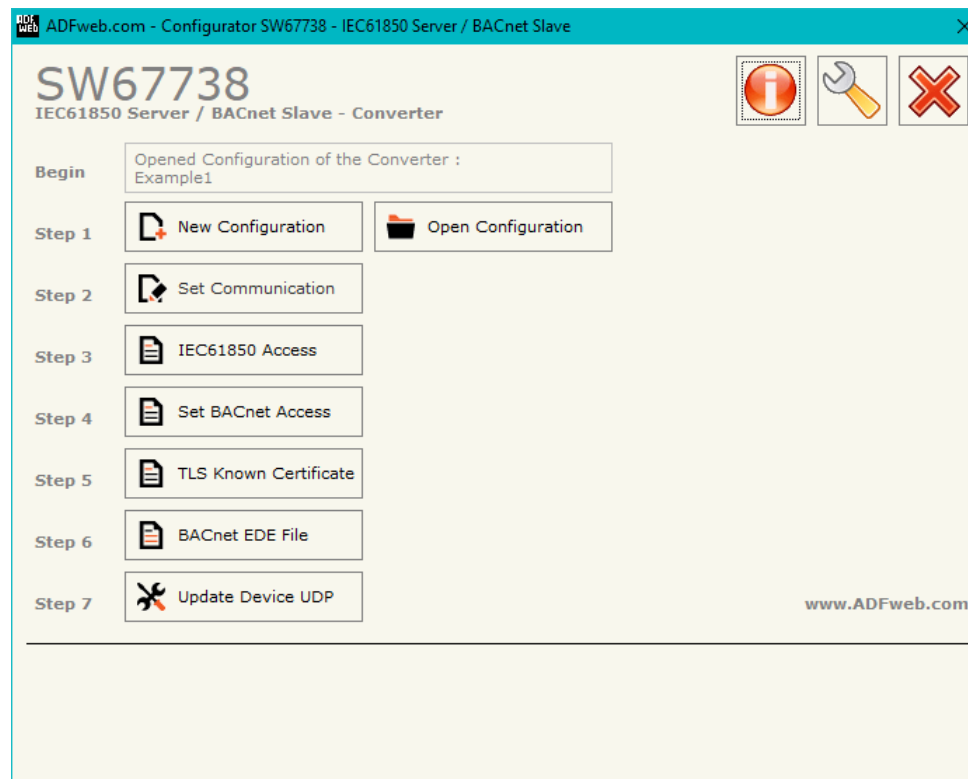


Figure 2: Main window for SW67738


NEW CONFIGURATION / OPEN CONFIGURATION:

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

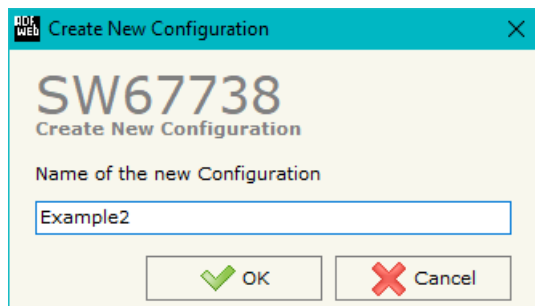


A device’s configuration can also be imported or exported:


- To clone the configurations of a programmable “IEC 61850 Server / BACnet Slave - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

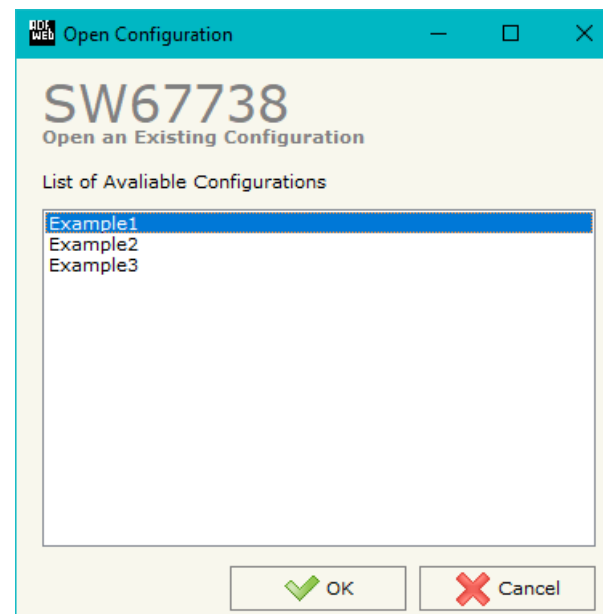


SOFTWARE OPTIONS:

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

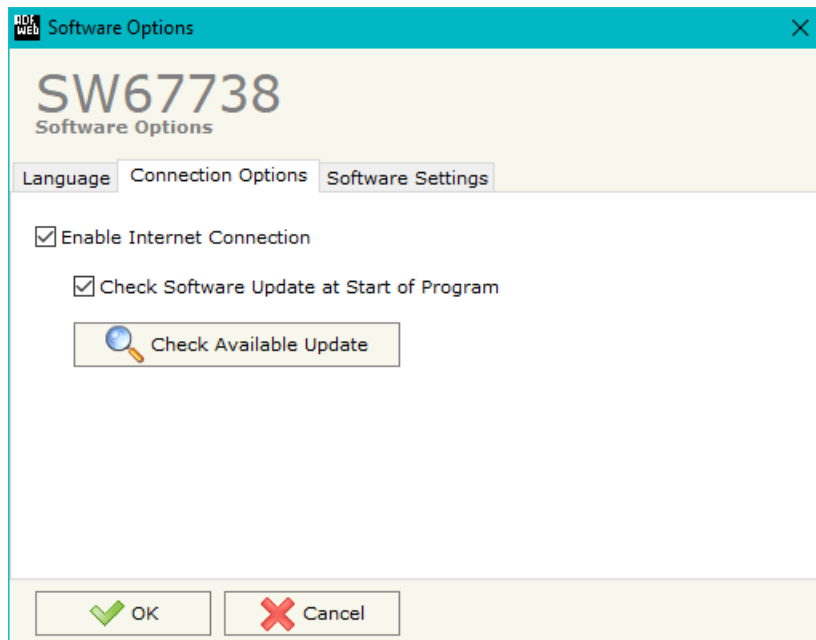

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the SW67738 checks automatically if there are updatings when it is launched.

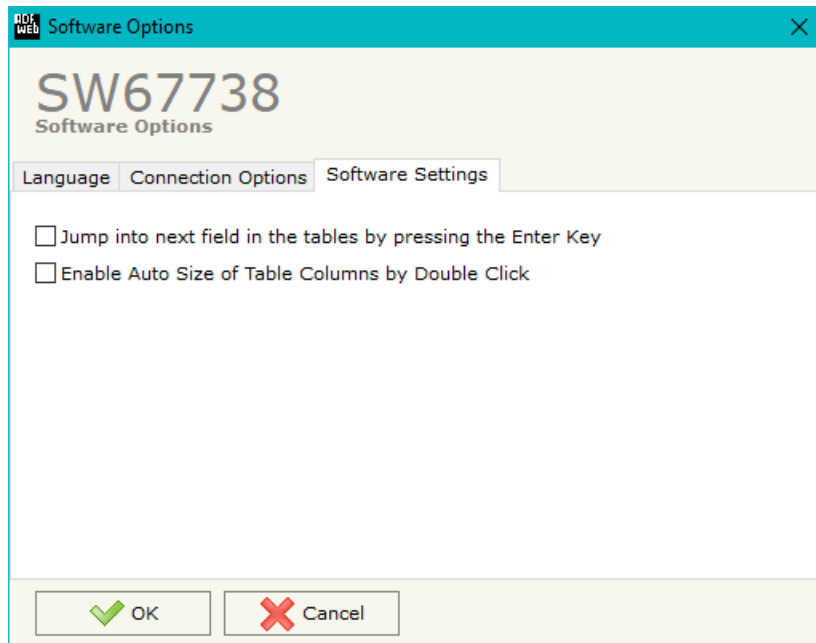

In the section "Software Settings", it is possible to enable/disable some keyboard's commands for an easier navigation inside the tables contained in the different sections of the software.

SET COMMUNICATION:

By Pressing the "**Set Communication**" button from the main window for SW67738 (Fig. 2) the window "Set Communication" appears (Fig. 3).

The window is divided in different sections in order to define the different parameters of the converter:

- IEC 61850 Server
- TLS (Transport Layer Security) Server
- BACnet Slave
- NTP (Network Time Protocol)

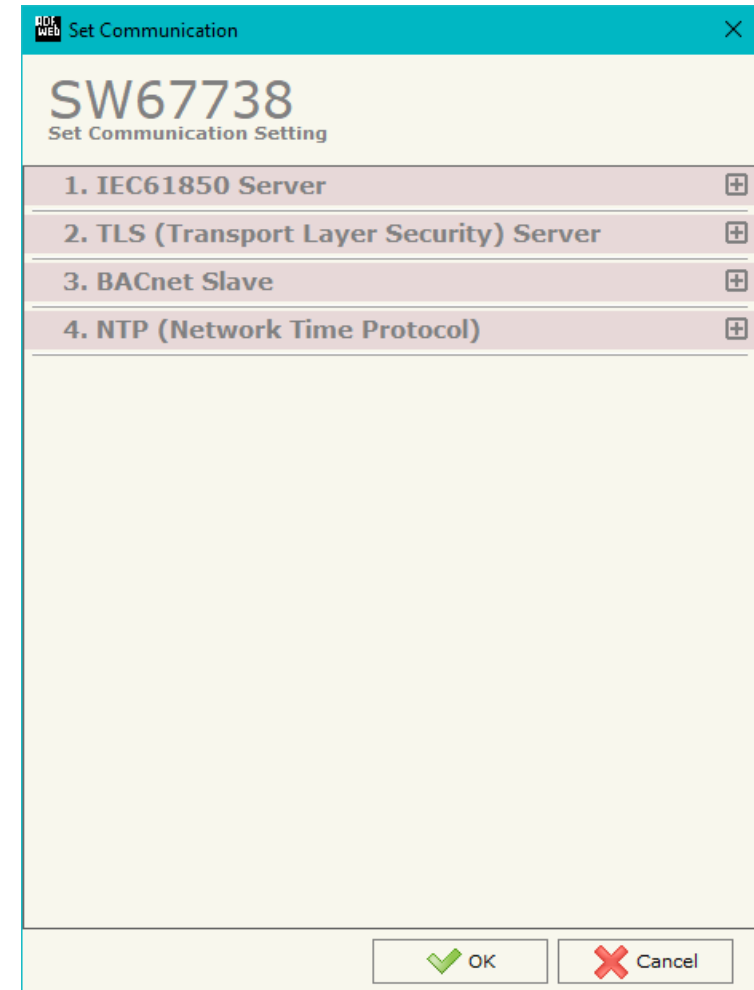


Figure 3a: "Set Communication" window

IEC 61850 SERVER:


This section is used to define the main parameters of IEC 61850 line. The means of the fields are:

- ➔ In the field "**Port**" the port used for IEC 61850 communication is defined;
- ➔ If the field "**Password**" the password used for accessing to IEC 61850 variables is defined.

TLS (TRANSPORT LAYER SECURITY) SERVER


This section is used to define the main parameters of TLS protocol. The means of the fields are:

- ➔ If the field "**Enable TLS**" is checked, the TLS protocol for secure connection is enabled;
- ➔ In the field "**Key**" the key for the authentication is defined;
- ➔ In the field "**Key Password**" the password for decrypting the key is defined;
- ➔ In the field "**Server Certificate**" the certificate for the server is defined;
- ➔ In the field "**Root Certificate**" the root of the server is defined;
- ➔ If the field "**Enable Only Known Certificates**" is checked, the converter will accept just connection from known Clients (defined in the section "TLS Known Certificate").

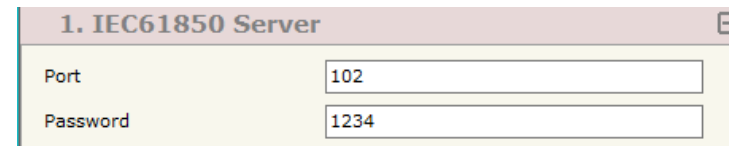

1. IEC61850 Server	
Port	102
Password	1234

Figure 3b: "Set Communication → IEC 61850 Server" window

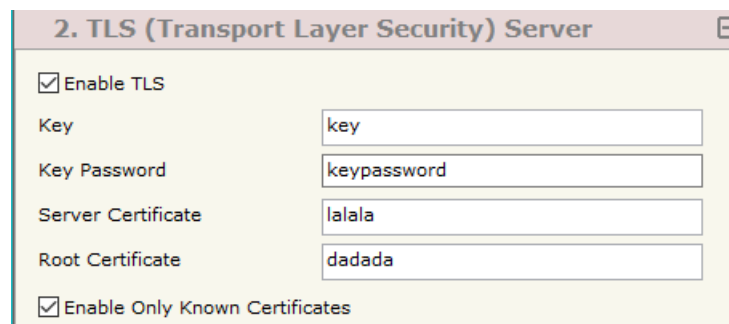

2. TLS (Transport Layer Security) Server	
<input checked="" type="checkbox"/> Enable TLS	
Key	key
Key Password	keypassword
Server Certificate	lalala
Root Certificate	dadada
<input checked="" type="checkbox"/> Enable Only Known Certificates	

Figure 3c: "Set Communication → TLS" window

BACNET SLAVE:

This section is used to define the main parameters of BACnet line. It is possible to select the type of BACnet to use from:

- BACnet/IP (it uses Ethernet);
- BACnet MS/TP (it uses RS485).

If selected "BACnet/IP" the means of the fields for "BACnet" are:

- In the fields "**IP ADDRESS**" the IP address of BACnet/IP side of the converter is defined;
- In the fields "**SUBNET Mask**" the SubNet Mask of BACnet/IP side of the converter is defined;
- In the fields "**GATEWAY**" the default gateway of the network is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field "**Port**" the port used for BACnet communication is defined. The default port used for BACnet communication is 47808, but is possible to insert any value;
- In the field "**BACnet Device Name**" the name of BACnet/IP side of the converter is defined;
- In the field "**Device Identifier**" the device instance of BACnet/IP side of the converter is defined;
- If the field "**BACnet description up to 32 chars**" is checked, the description of the BACnet objects can be up to 32 chars.

If selected "BACnet MS/TP" the means of the fields for "BACnet" are:

- In the field "**Baudrate**" the baudrate of BACnet MS/TP side of the converter is defined;
- In the field "**Parity**" the parity of BACnet MS/TP side of the converter is defined;
- In the field "**BACnet Device Name**" the name of BACnet MS/TP side of the converter is defined;

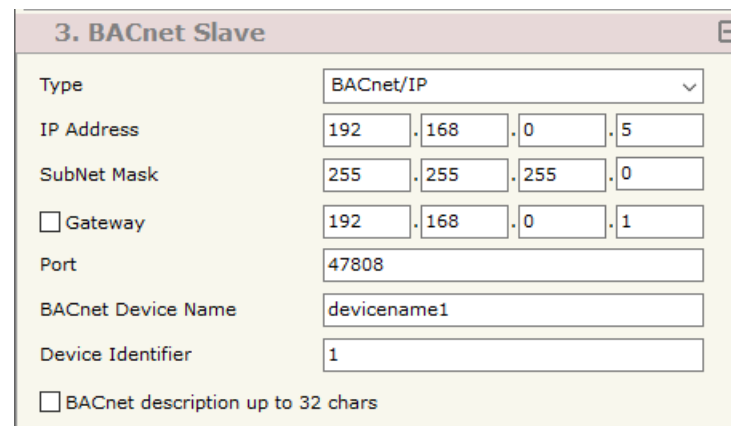



Figure 3d: "Set Communication → BACnet Slave" window

- In the field "**MAC Address**" the MAC of BACnet MS/TP side of the converter is defined;
- The field "**Max Masters**" specifies the highest allowable address for master nodes. The value shall be less than or equal to 127;
- The field "**Max Info Frames**" specifies the maximum number of information frames the node may send before it must pass the token;
- In the field "**Device Instance**" it is possible to assign a number to the BACnet node (used for the Device Instance);
- In the field "**Network**" the BACnet MS/TP network number is defined;
- If the field "**BACnet description up to 32 chars**" is checked, the description of the BACnet objects can be up to 32 chars.

NTP:

This section is used to define the general parameters of NTP. The means of the fields are:

- In the field "**Server URL**" the URL or the IP Address of the NTP Server is defined;
- In the field "**Poll Time (seconds)**" the polling time for the time synchronization is defined.

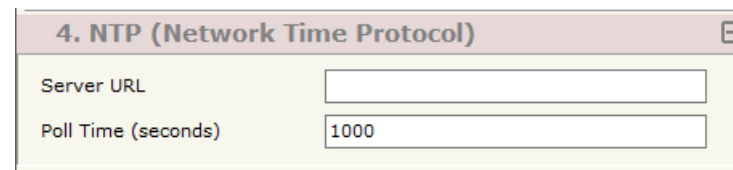

4. NTP (Network Time Protocol)	
Server URL	<input type="text"/>
Poll Time (seconds)	<input type="text" value="1000"/>

Figure 3e: "Set Communication → NTP" window

IEC 61850 ACCESS:

By Pressing the “**IEC 61850 Access**” button from the main window for SW67738 (Fig. 2) the window “Set Variables Access for IEC 61850” appears (Fig. 4).

This section is used to define the IEC 61850 variables from/to which take/map the data of BACnet Master.

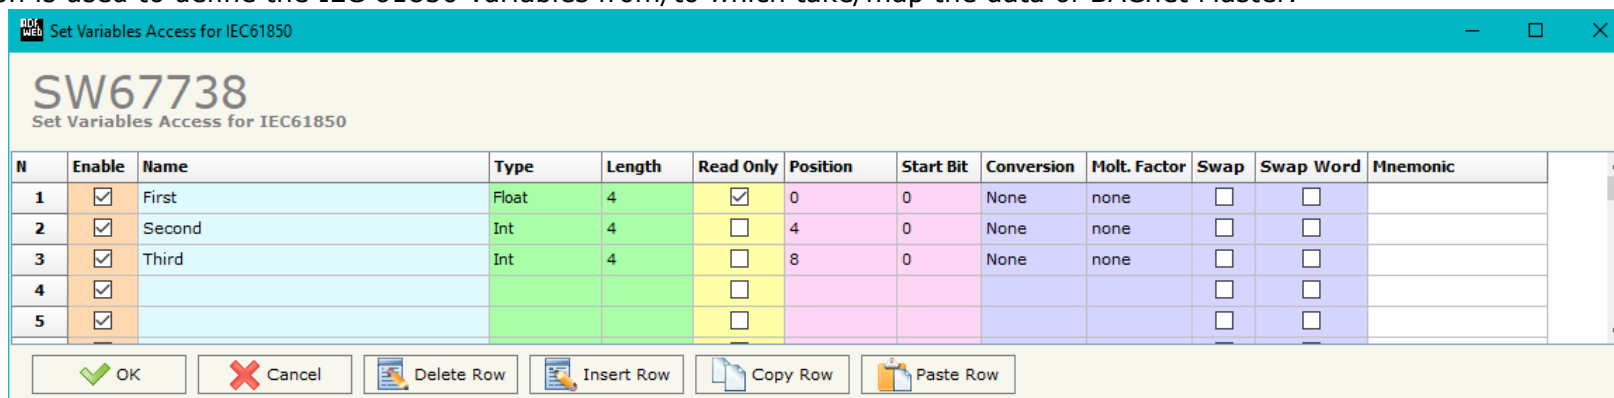


Figure 4: “IEC 61850 Access” window

The means of the fields are:

- If the field “**Enable**” is checked, the IEC 61850 variable is enabled;
- In the field “**Name**” the name of the IEC 61850 variable is defined;
- In the field “**Type**” the data format of the IEC 61850 variable is defined;
- In the field “**Length**” the dimension of the IEC 61850 variable is defined;
- If the field “**Read Only**” is checked, the IEC 61850 variable is just in reading. Otherwise, it is writeable too;
- In the field “**Position**” the starting byte of the internal memory arrays from/to which taking/mapping the data is defined;
- In the field “**Start Bit**” the starting bit of the byte of the field “Position” is defined;
- In the field “**Conversion**” the conversion of the data is defined. This option is used to convert the data format between BACnet and IEC 61850;
- In the field “**Molt. Factor**” a multiplicative factor of the value is defined;
- If the field “**Swap**” is checked, the bytes’ order is reversed;
- If the field “**Swap World**” is checked, the words’ order is reversed;
- In the field “**Mnemonic**” a description of the variable is defined.

SET BACNET ACCESS:

By Pressing the “**Set BACnet Access**” button from the main window for SW67738 (Fig. 2) the window “BACnet Set Access” appears (Fig. 5).

The window is divided in two parts, the “**BACnet in Read**” that contains the BACnet objects readable by a BACnet Master; and “**BACnet in Write**” that contains the BACnet objects writeable by a BACnet Master.

The meaning of the fields in the window are the follows:

- In the field “**Data Type**” is possible to select the BACnet object data type;
- In the field “**Eng. Unit**”, with double click the window “*Select the BACnet Engineering Unit*” appears (Fig. 6);
- In the field “**Position**” is possible to select the position where take/save the data from internal memory array;
- The field “**Start Bit**” is used for the “Binary In” and “Binary Out” BACnet objects;
- The field “**Length**” is used for all the others BACnet objects;
- In the field “**Mnemonic**” a description of the object is defined.


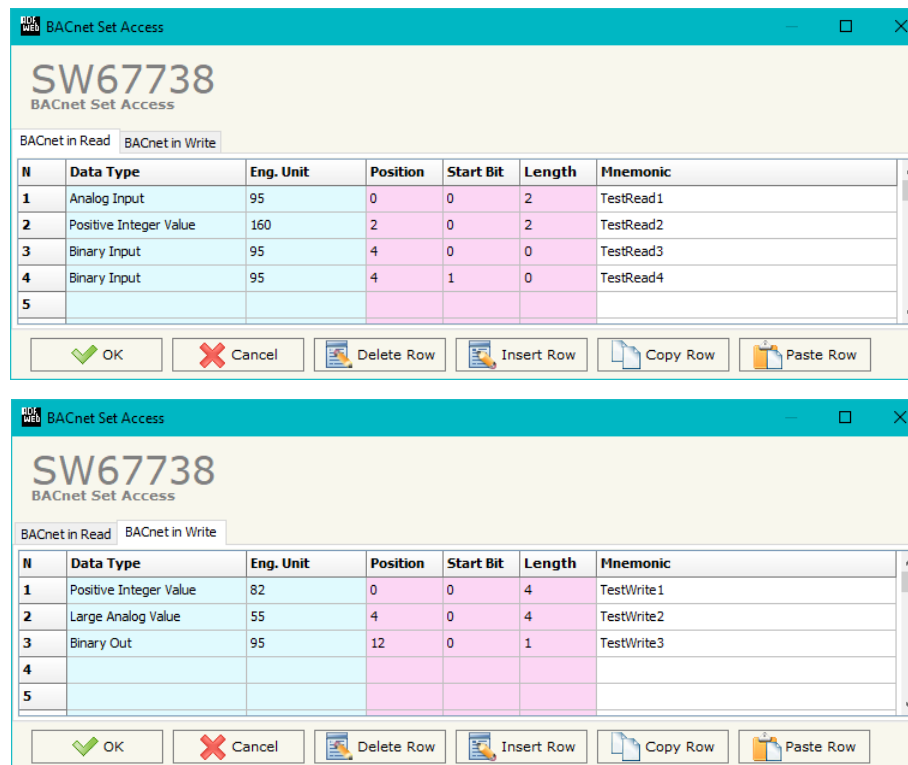


Figure 5: “BACnet Set Access” window

It is possible to insert directly the Unit (using its unique number) by compiling the “**Selected BACnet Engineering Unit**” field; or by selecting with the fields “**Select the Type**” and “**Select unit**” the Type/Unit desired. If the second way is used, is necessary to press the “**Select Engineering Unit**” button for confirm the choice.

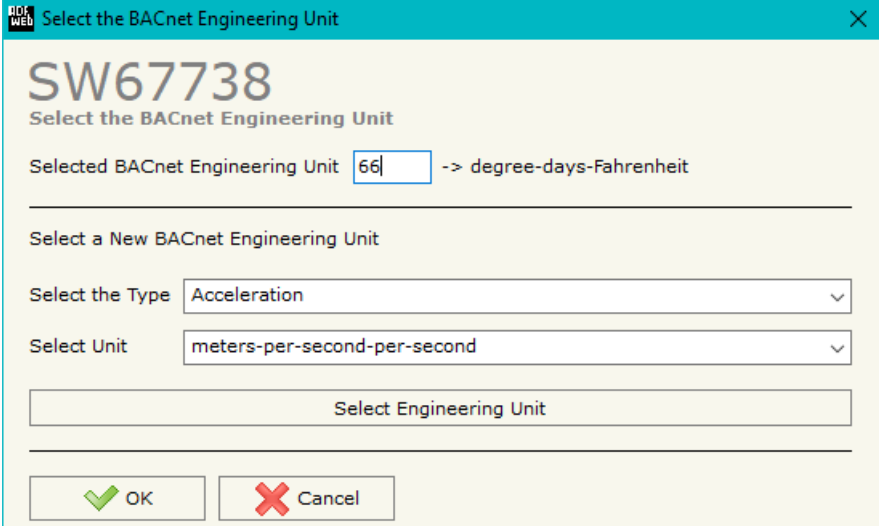

ADFweb Select the BACnet Engineering Unit

SW67738

Select the BACnet Engineering Unit

Selected BACnet Engineering Unit -> degree-days-Fahrenheit

Select a New BACnet Engineering Unit

Select the Type

Select Unit

Figure 6: "Select the BACnet Engineering Unit" window

TLS KNOWN CERTIFICATE:

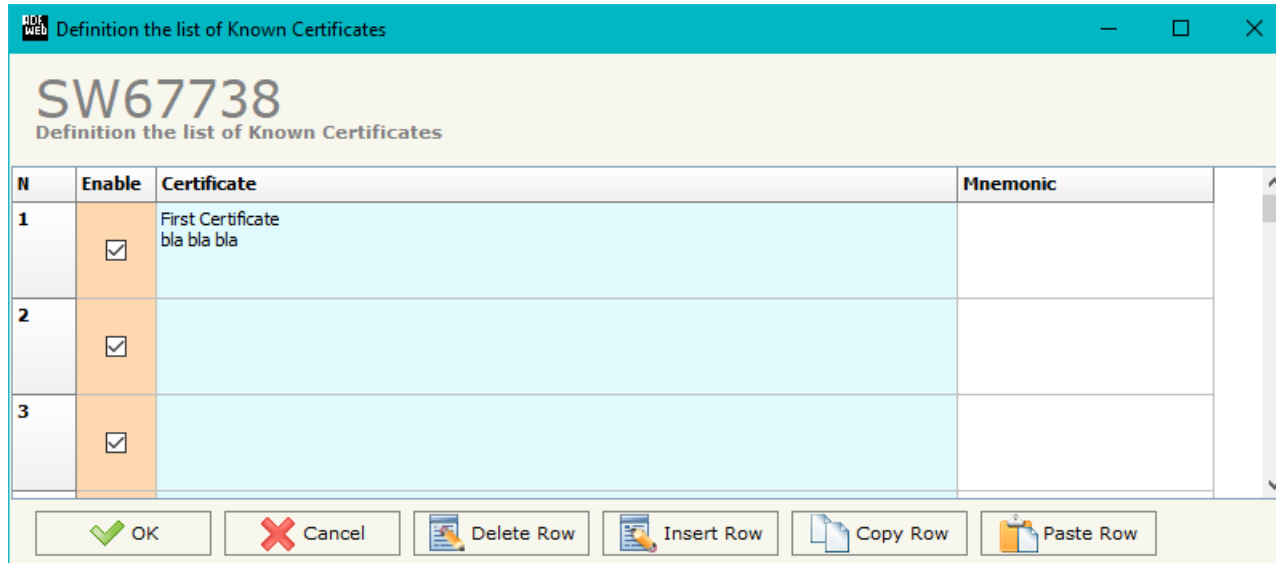


Figure 7: "TLS Known Certificate" window

By pressing the "TLS Known Certificate" button from the Main Window of SW67738 (Fig. 2) the "Definition the list of Known Certificates" window appears (Fig. 7).

The data of the columns have the following meanings:

- If the field "Enable" is checked, the TLS certificate is allowed;
- In the field "Certificate" the certificate of the Client is defined;
- In the field "Mnemonic" a description is defined.

BACNET EDE FILE:

By pressing the "BACnet EDE File" button it is possible to save the EDE file for the BACnet Master.

UPDATE DEVICE:

By pressing the **“Update Device”** button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary. This by using the Ethernet port.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in ON position;
- Turn ON the device
- Connect the Ethernet cable;
- Insert the IP **“192.168.2.205”**;
- Select which operations you want to do;
- Press the **“Execute update firmware”** button to start the upload;
- When all the operations are “OK” turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in OFF position;
- Turn ON the device.

If you know the actual IP address of the device, you have to use this procedure:

- Turn ON the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Select which operations you want to do;
- Press the **“Execute update firmware”** button to start the upload;
- When all the operations are “OK” the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly updated.

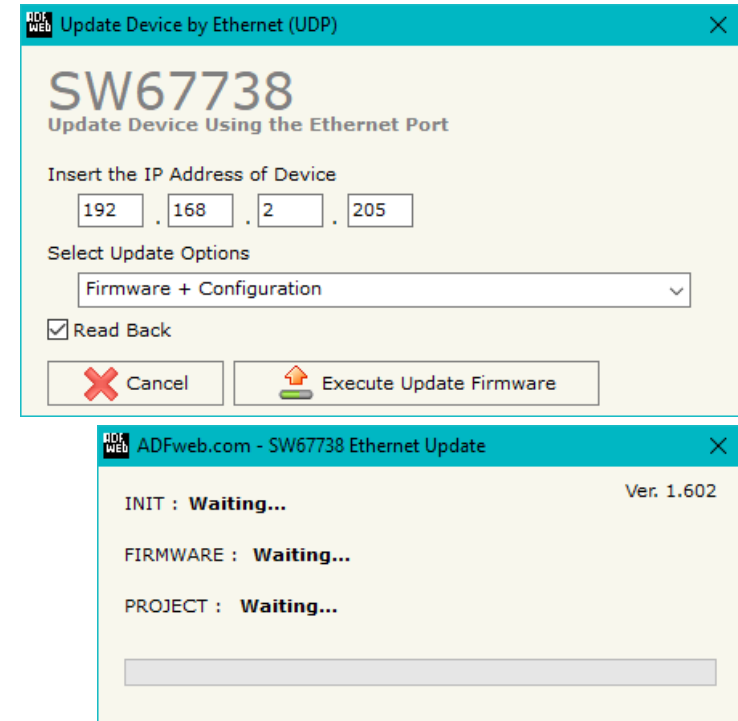


Figure 8: “Update device” windows



Note:

When you receive the device, for the first time, you also have to update the Firmware in the HD67738 device.



Warning:

If Fig. 9 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- Check the LAN settings;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven, Vista, 8 or 10 make sure that you have the administrator privileges;
- In case you have to program more than one device, using the "UDP Update", you have to cancel the ARP table every time you connect a new device on Ethernet. For do this you have to launch the "Command Prompt" and write the command "arp -d". Pay attention that with Windows Vista, Seven, 8, 10 you have to launch the "Command Prompt" with Administrator Rights;
- Pay attention at Firewall lock.

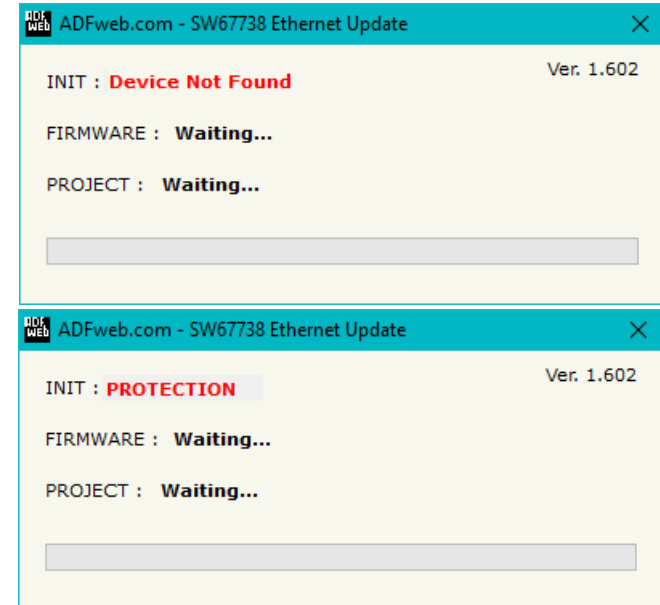



Figure 9: "Error" window



Warning:

In the case of HD67738 you have to use the software "SW67738": www.adfweb.com/download/filefold/SW67738.zip.

MECHANICAL DIMENSIONS:

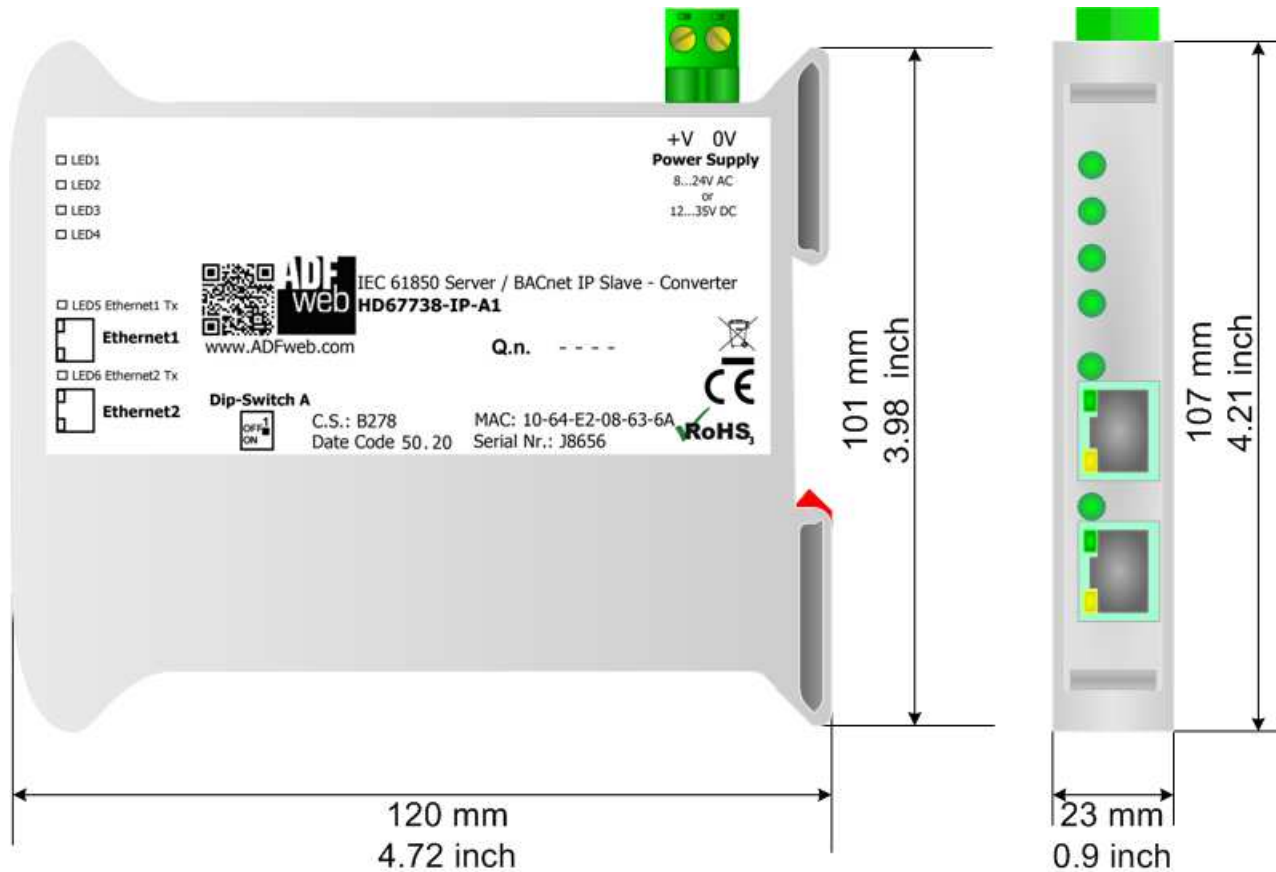


Housing: PVC
Weight: 200g (Approx)

Figure 10: Mechanical dimensions scheme for HD67738-XXX-A1

ORDERING INFORMATIONS:

The ordering part number is formed by a valid combination of the following:

HD67738 - xxx - xx

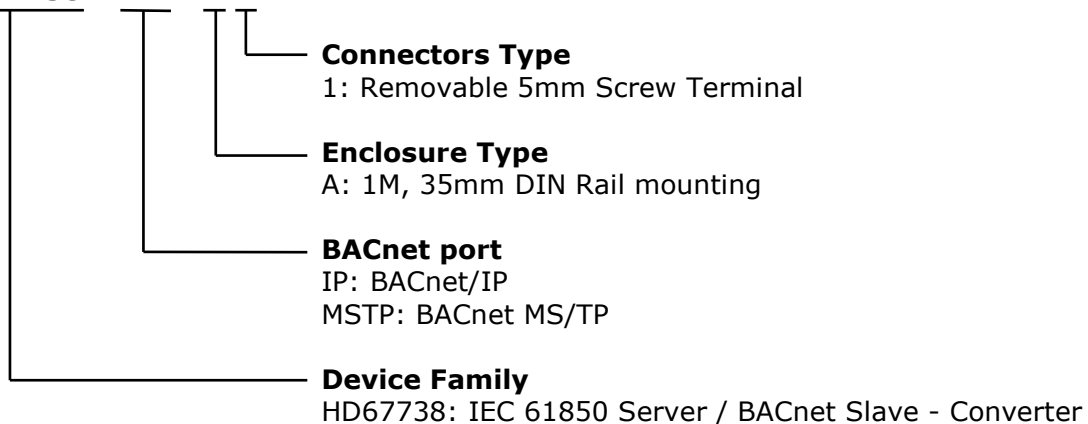

- Order Code: **HD67738-IP-A1** - IEC 61850 Server / BACnet/IP Slave - Converter
- Order Code: **HD67738-MSTP-A1** - IEC 61850 Server / BACnet MS/TP Slave - Converter

ACCESSORIES:

- Order Code: **AC34011** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V DC
- Order Code: **AC34012** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 24 V DC

DISCLAIMER:

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

OTHER REGULATIONS AND STANDARDS:**WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

CE MARKING

The product conforms with the essential requirements of the applicable EC directives.

WARRANTIES AND TECHNICAL SUPPORT:

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at www.adfweb.com. Otherwise contact us at the address support@adfweb.com

RETURN POLICY:

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at www.adfweb.com. Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



ADFweb.com S.r.l.
Via Strada Nuova, 17
IT-31010 Mareno di Piave
TREVISO (Italy)
Phone +39.0438.30.91.31
Fax +39.0438.49.20.99
www.adfweb.com

