

## User Manual

Revision 1.000

English

### IEC61850 Server / DeviceNet Master - Converter

(Order Code: HD67741-A1)

For Website information:

[www.adfweb.com?Product=HD67741](http://www.adfweb.com?Product=HD67741)

For Price information:

[www.adfweb.com?Price=HD67741-A1](http://www.adfweb.com?Price=HD67741-A1)

#### Benefits and Main Features:

- ⊕ Very easy to configure
- ⊕ Triple Electrical isolation
- ⊕ Temperature range: -40°C/+85°C (-40°F/+185°F)



For other IEC 61850 products see also the following link:

#### Converter IEC 61850 Server to

[www.adfweb.com?Product=HD67B82](http://www.adfweb.com?Product=HD67B82)  
[www.adfweb.com?Product=HD67620](http://www.adfweb.com?Product=HD67620)  
[www.adfweb.com?Product=HD67733](http://www.adfweb.com?Product=HD67733)  
[www.adfweb.com?Product=HD67734](http://www.adfweb.com?Product=HD67734)  
[www.adfweb.com?Product=HD67735](http://www.adfweb.com?Product=HD67735)  
[www.adfweb.com?Product=HD67736](http://www.adfweb.com?Product=HD67736)  
[www.adfweb.com?Product=HD67737](http://www.adfweb.com?Product=HD67737)  
[www.adfweb.com?Product=HD67738](http://www.adfweb.com?Product=HD67738)  
[www.adfweb.com?Product=HD67739](http://www.adfweb.com?Product=HD67739)  
[www.adfweb.com?Product=HD67740](http://www.adfweb.com?Product=HD67740)  
[www.adfweb.com?Product=HD67742](http://www.adfweb.com?Product=HD67742)  
[www.adfweb.com?Product=HD67743](http://www.adfweb.com?Product=HD67743)  
[www.adfweb.com?Product=HD67744](http://www.adfweb.com?Product=HD67744)  
[www.adfweb.com?Product=HD67745](http://www.adfweb.com?Product=HD67745)  
[www.adfweb.com?Product=HD67746](http://www.adfweb.com?Product=HD67746)  
[www.adfweb.com?Product=HD67747](http://www.adfweb.com?Product=HD67747)  
[www.adfweb.com?Product=HD67748](http://www.adfweb.com?Product=HD67748)  
[www.adfweb.com?Product=HD67749](http://www.adfweb.com?Product=HD67749)  
[www.adfweb.com?Product=HD67750](http://www.adfweb.com?Product=HD67750)  
[www.adfweb.com?Product=HD67751](http://www.adfweb.com?Product=HD67751)  
[www.adfweb.com?Product=HD67752](http://www.adfweb.com?Product=HD67752)  
[www.adfweb.com?Product=HD67753](http://www.adfweb.com?Product=HD67753)  
[www.adfweb.com?Product=HD67754](http://www.adfweb.com?Product=HD67754)  
[www.adfweb.com?Product=HD67755](http://www.adfweb.com?Product=HD67755)  
[www.adfweb.com?Product=HD67756](http://www.adfweb.com?Product=HD67756)  
[www.adfweb.com?Product=HD67C65](http://www.adfweb.com?Product=HD67C65)  
[www.adfweb.com?Product=HD67D35](http://www.adfweb.com?Product=HD67D35)  
[www.adfweb.com?Product=HD67E15](http://www.adfweb.com?Product=HD67E15)  
[www.adfweb.com?Product=HD67E65](http://www.adfweb.com?Product=HD67E65)  
[www.adfweb.com?Product=HD67F35](http://www.adfweb.com?Product=HD67F35)

**(PROFINET Master)**  
**(S7comm)**  
**(Modbus Master)**  
**(Modbus Slave)**  
**(Modbus TCP Master)**  
**(Modbus TCP Slave)**  
**(BACnet Master)**  
**(BACnet Slave)**  
**(CAN)**  
**(CANopen)**  
**(DeviceNet Slave)**  
**(EtherNet/IP Master)**  
**(EtherNet/IP Slave)**  
**(J1939)**  
**(KNX)**  
**(MQTT)**  
**(NMEA0183)**  
**(NMEA2000)**  
**(PROFIBUS Master)**  
**(PROFIBUS Slave)**  
**(PROFINET Slave)**  
**(SNMP Manager)**  
**(SNMP Agent)**  
**(Serial)**  
**(Ethernet)**  
**(EnOcean)**  
**(LoRaWAN)**  
**(EtherCAT Slave)**  
**(EtherCAT Master)**  
**(LoRaWAN Gateway)**



User Manual



**INDEX:**

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	6
CONFIGURATION	6
POWER SUPPLY	7
FUNCTION MODES	8
LEDS	9
CAN	10
ETHERNET	11
USE OF COMPOSITOR SW67741	12
NEW CONFIGURATION / OPEN CONFIGURATION	13
SOFTWARE OPTIONS	14
SET COMMUNICATION	16
IEC61850 ACCESS	18
DEVICENET NETWORK	20
DEFINE OFFSET	21
TLS KNOWN CERTIFICATE	22
UPDATE DEVICE	23
MECHANICAL DIMENSIONS	24
ORDERING INFORMATIONS	25
ACCESSORIES	25
DISCLAIMER	26
OTHER REGULATIONS AND STANDARDS	26
WARRANTIES AND TECHNICAL SUPPORT	27
RETURN POLICY	27

**UPDATED DOCUMENTATION:**

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- ✚ Updated
- ✚ Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page [www.adfweb.com/download/](http://www.adfweb.com/download/) and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

**REVISION LIST:**

Revision	Date	Author	Chapter	Description
1.000	18/09/2021	Ff	All	First Release

**WARNING:**

ADFweb.com reserves the right to change information in this manual about our product without warning. ADFweb.com is not responsible for any error this manual may contain.

**TRADEMARKS:**

All trademarks mentioned in this document belong to their respective owners.

**SECURITY ALERT:****GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

**INTENDED USE**

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

**QUALIFIED PERSONNEL**

The device can be used only by qualified personnel, strictly in accordance with the specifications.

Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

**RESIDUAL RISKS**

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

**CE CONFORMITY**

The declaration is made by our company. You can send an email to [support@adfweb.com](mailto:support@adfweb.com) or give us a call if you need it.

**EXAMPLES OF CONNECTION:**

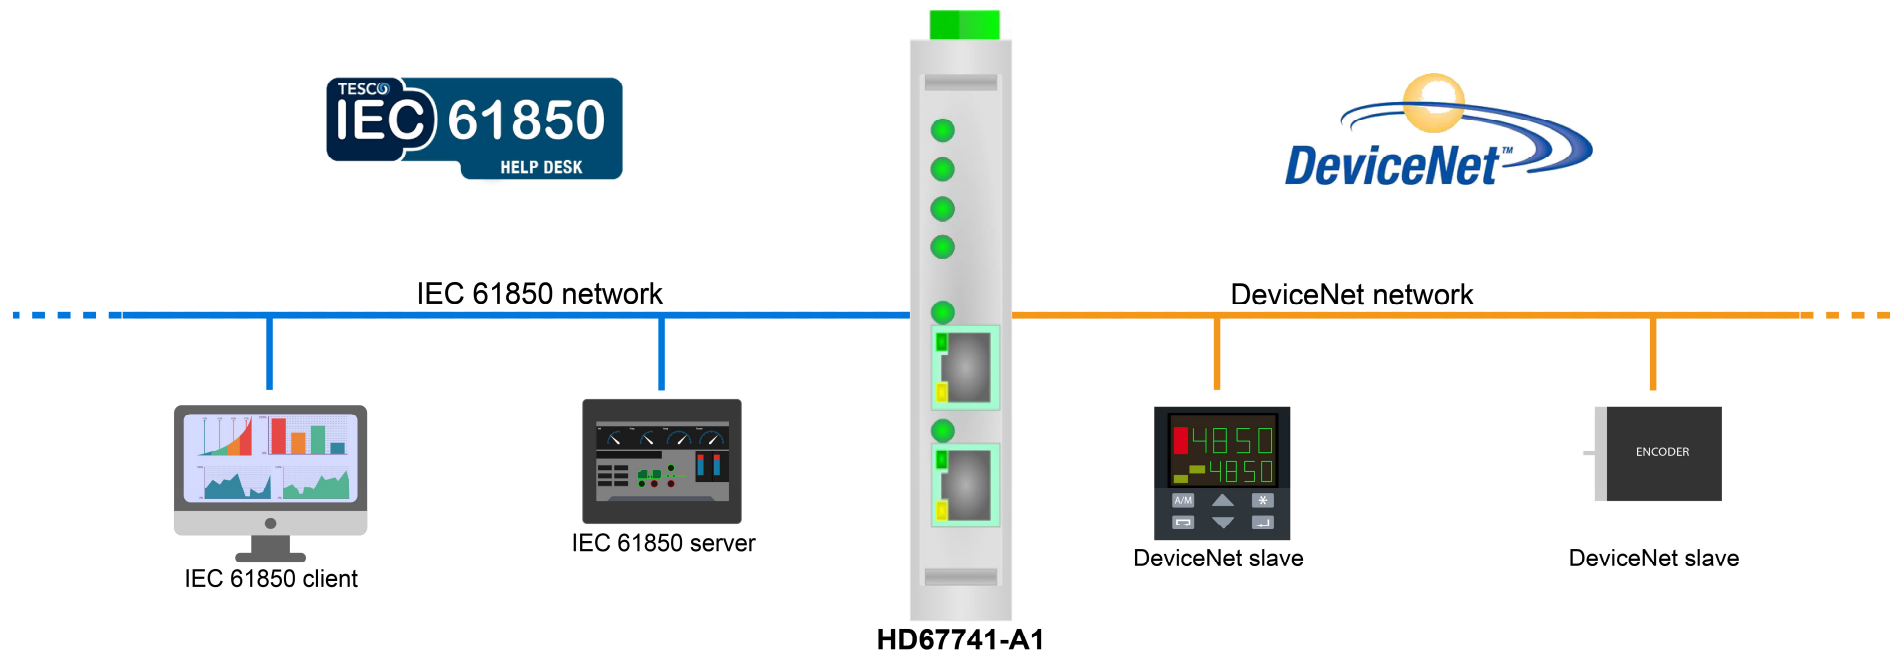

**CONNECTION SCHEME:**

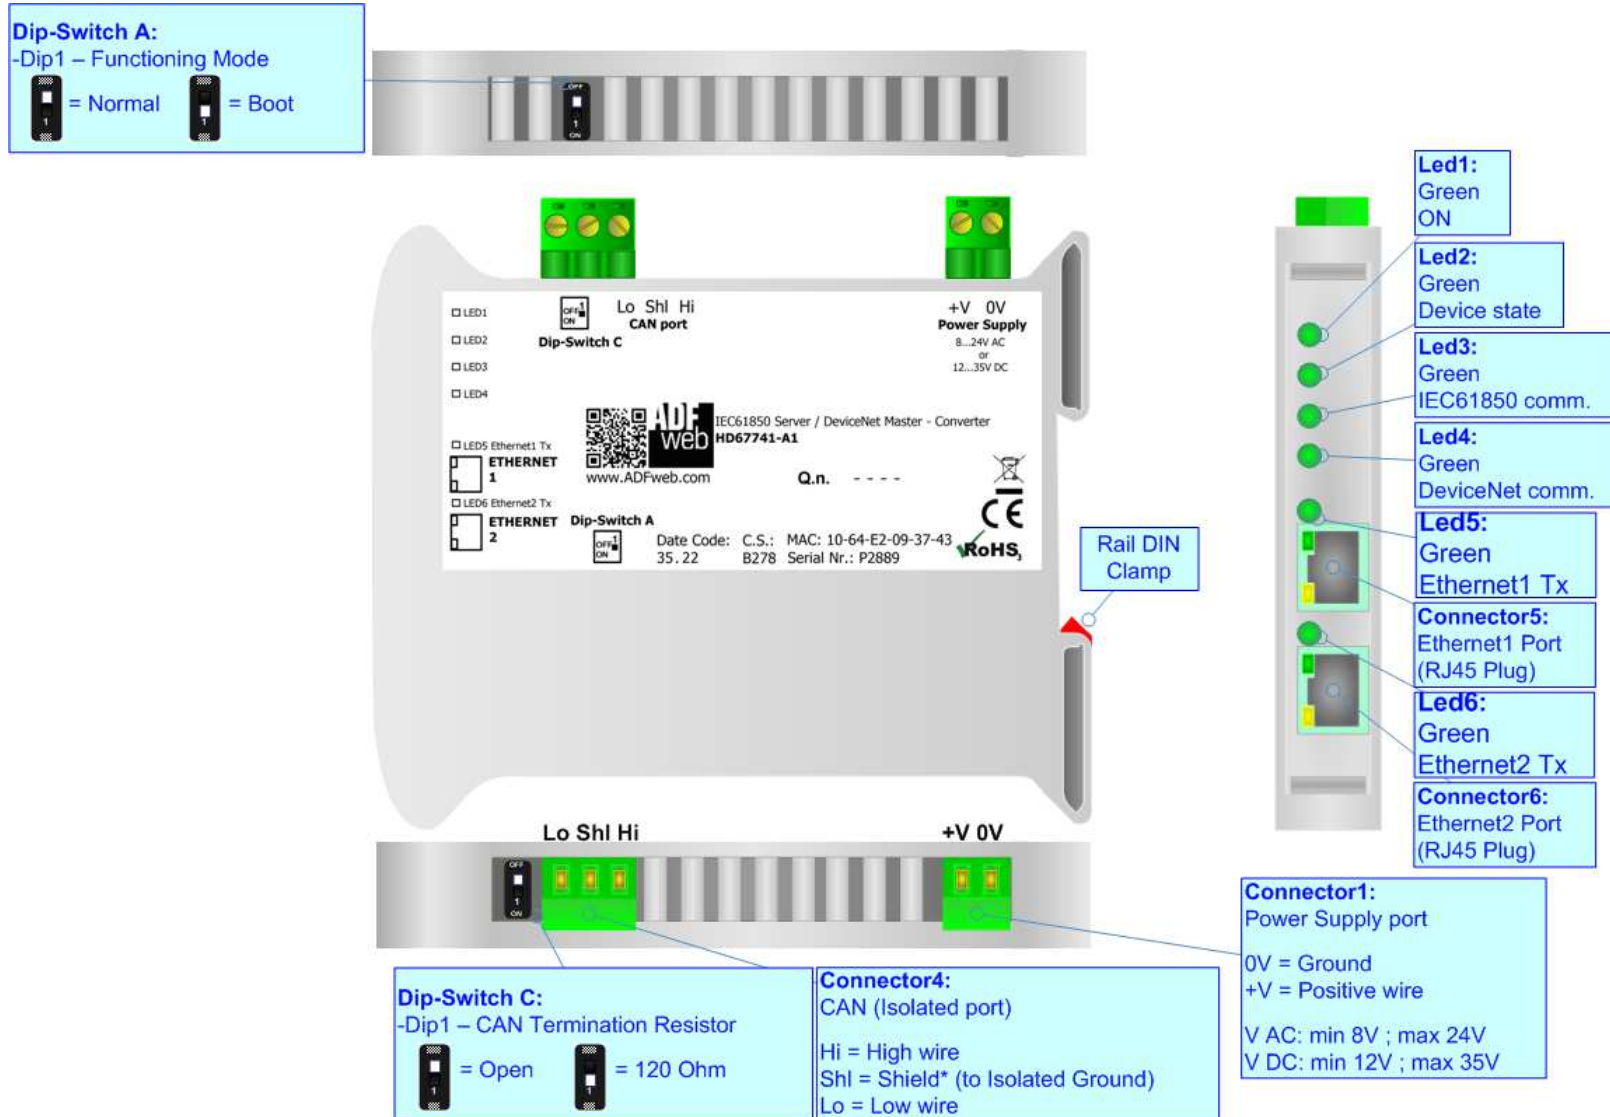


Figure 1: Connection scheme for HD67741-A1

**CHARACTERISTICS:**

The HD67741-A1 is IEC61850 Server / DeviceNet Master - Converter.

It allows for the following characteristics:

- Isolation between Ethernet – CAN - Power Supply;
- Two-directional information between DeviceNet bus and IEC61850 bus;
- Mountable on 35mm Rail DIN;
- Wide power supply input range: 8...24V AC or 12...35V DC;
- Wide temperature range: -40°C / 85°C [-40°F / +185°F].



**CONFIGURATION:**

You need Compositor SW67741 software on your PC in order to perform the following:

- Define the parameters of DeviceNet line;
- Define the parameters of IEC61850 line;
- Define IEC 61850 variables that contains the data from DeviceNet side;
- Define IEC 61850 variables that contains the data to write to DeviceNet side;
- Define the list of DeviceNet slaves to read/write;
- Define the offset with which mapping the data from/to DeviceNet into the internal memory array;
- Update the device.

**POWER SUPPLY:**

The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.

VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V


Consumption at 24V DC:

Device	Consumption [W/VA]
HD67741-A1	3.5

**Connector1:**  
Power Supply port  
0V = Ground  
+V = Positive wire  
V AC: min 8V ; max 24V  
V DC: min 12V ; max 35V



**Caution: Do not reverse the polarity power**

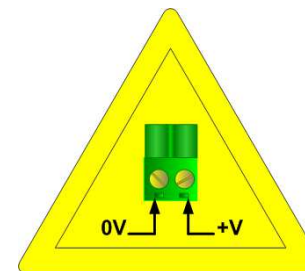

HD67741-A1


**FUNCTION MODES:**

The device has got two function modes depending on the position of the 'Dip1 of Dip-Switch A':

- The first, with 'Dip1 of Dip-Switch A' at "OFF" position, is used for the normal working of the device.
- The second, with 'Dip1 of Dip-Switch A' at "ON" position, is used for uploading the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.

According to the functioning mode, the LEDs will have specific functions, see 'LEDS' section.

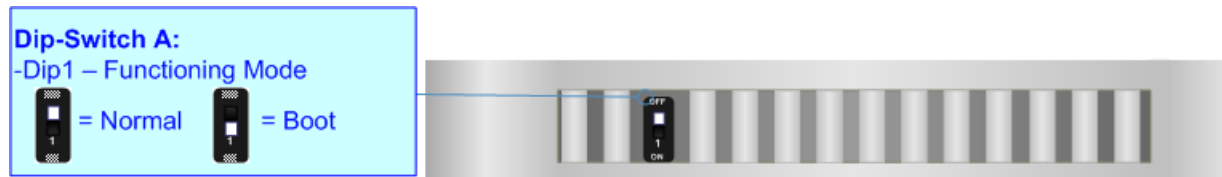




**LEDS:**


The device has got six LEDs that are used to give information about the functioning status. The various meanings of the LEDs are described in the table below.

LED	Normal Mode	Boot Mode
1: ON [supply voltage ] (green)	<b>ON:</b> Device powered <b>OFF:</b> Device not powered	<b>ON:</b> Device powered <b>OFF:</b> Device not powered
2: Device State (green)	Blinks slowly (~1Hz)	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
3: IEC61850 comm. (green)	It blinks when IEC61850 communication is running	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
4: DeviceNet comm. (green)	It blinks when DeviceNet communication is running	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
5: Ethernet1 Tx (green)	Blinks when is transmitting Ethernet frames	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress
6: Ethernet2 Tx (green)	Blinks when is transmitting Ethernet frames	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (~0.5Hz):</b> update in progress

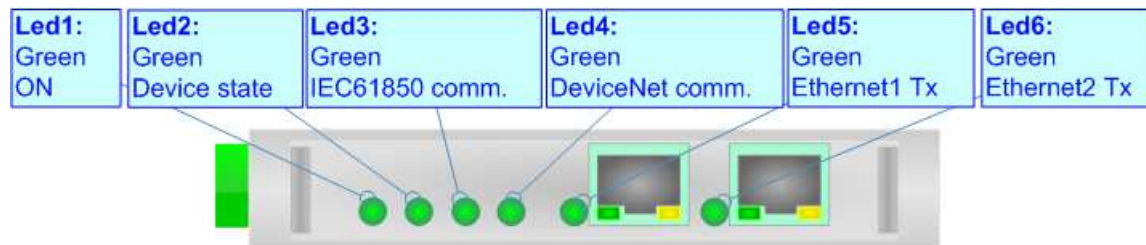

**CAN:**

For terminate the CAN line with a 120Ω resistor it is necessary that the Dip1 of 'Dip-Switch C' is at ON position.

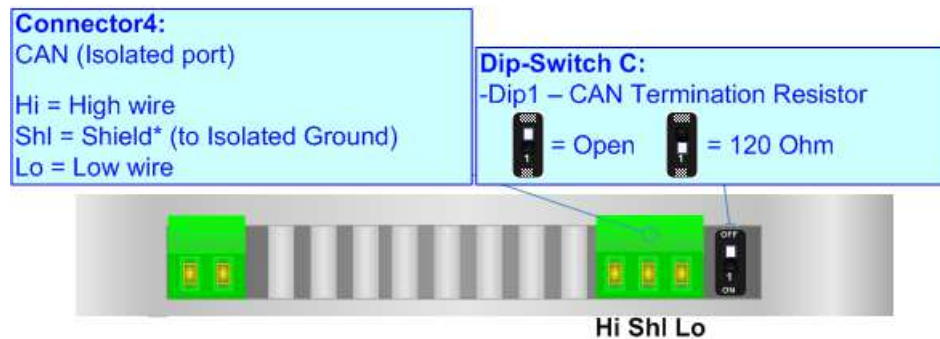


Cable characteristics:

<b>DC parameter:</b>	Impedance	70 Ohm/m
<b>AC parameters:</b>	Impedance	120 Ohm/m
	Delay	5 ns/m
<b>Length</b>	<b>Baud Rate [bps]</b>	<b>Length MAX [m]</b>
	10 K	5000
	20 K	2500
	50 K	1000
	100 K	650
	125 K	500
	250 K	250
	500 K	100
	800 K	50
	1000 K	25

**ETHERNET:**


IEC61850 connection and the updating of the converters must be made using Connector5 and/or Connector6 of the HD67741-A1 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC/PLC/other is recommended the use of a cross cable.

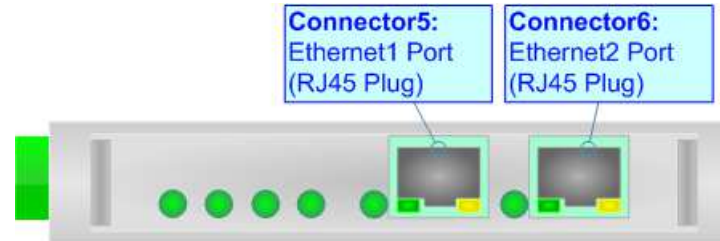

**USE OF COMPOSITOR SW67741:**

To configure the Converter, use the available software that runs with Windows called SW67741. It is downloadable on the site [www.adfweb.com](http://www.adfweb.com) and its operation is described in this document. *(This manual is referenced to the last version of the software present on our web site)*. The software works with MSWindows (XP, Vista, Seven, 8, 10, 11; 32/64bit).

When launching the SW67741, the window below appears (Fig. 2).

 **Note:**  
It is necessary to have installed .Net Framework 4.


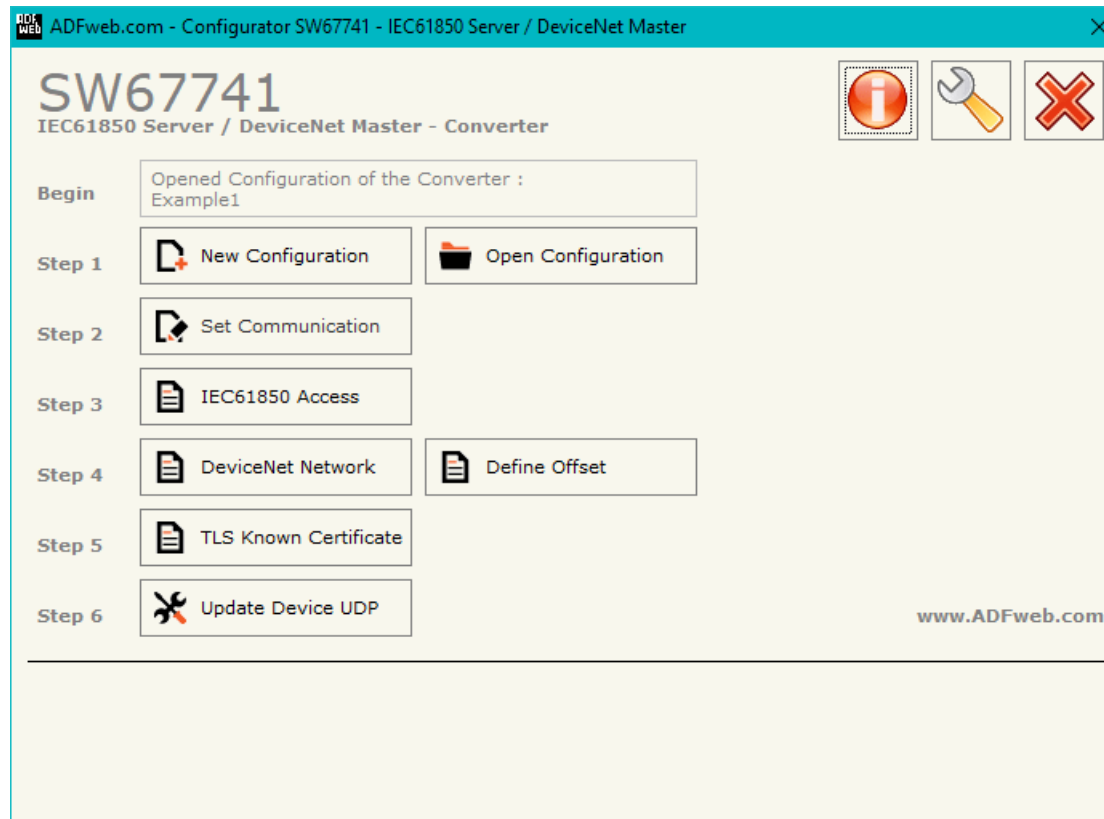


Figure 2: Main window for SW67741


**NEW CONFIGURATION / OPEN CONFIGURATION:**

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

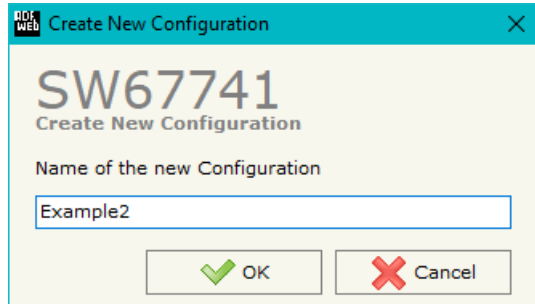


A device’s configuration can also be imported or exported:



- To clone the configurations of a programmable “IEC61850 Server / DeviceNet Master - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

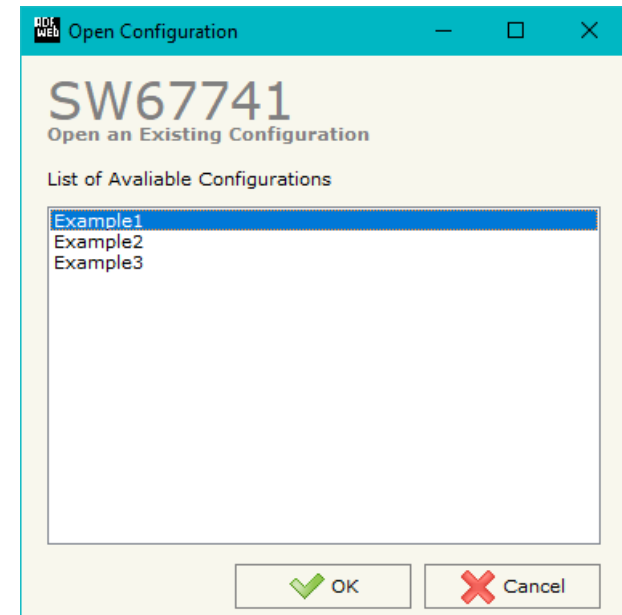


**SOFTWARE OPTIONS:**

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

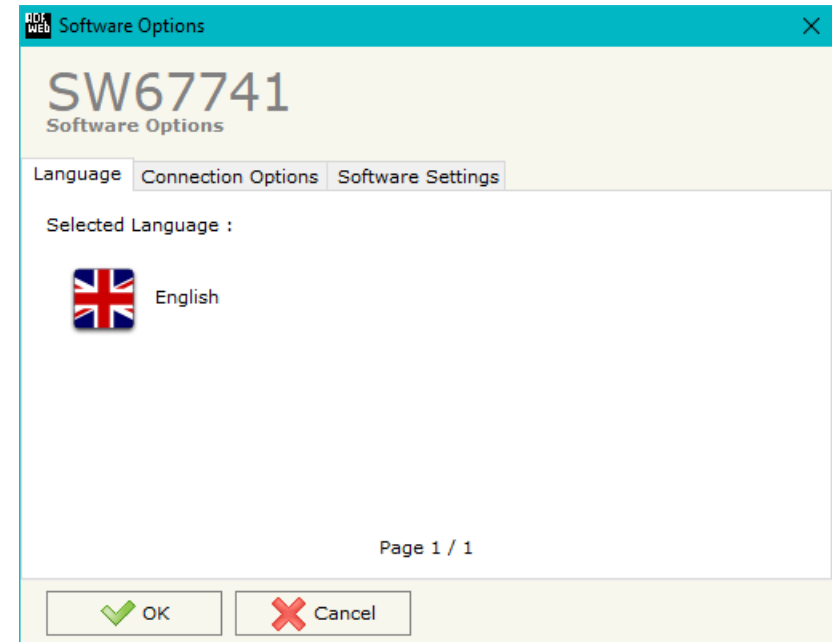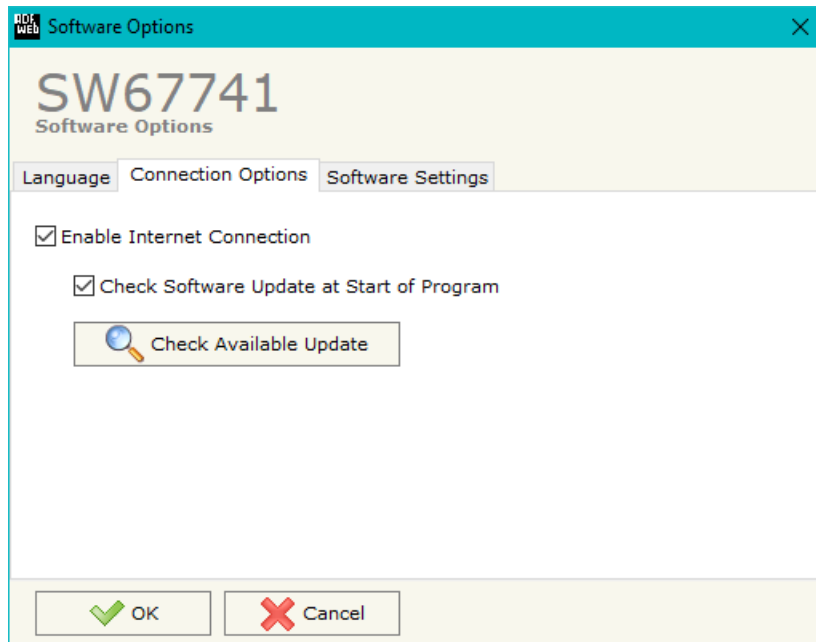

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the SW67741 checks automatically if there are updatings when it is launched.

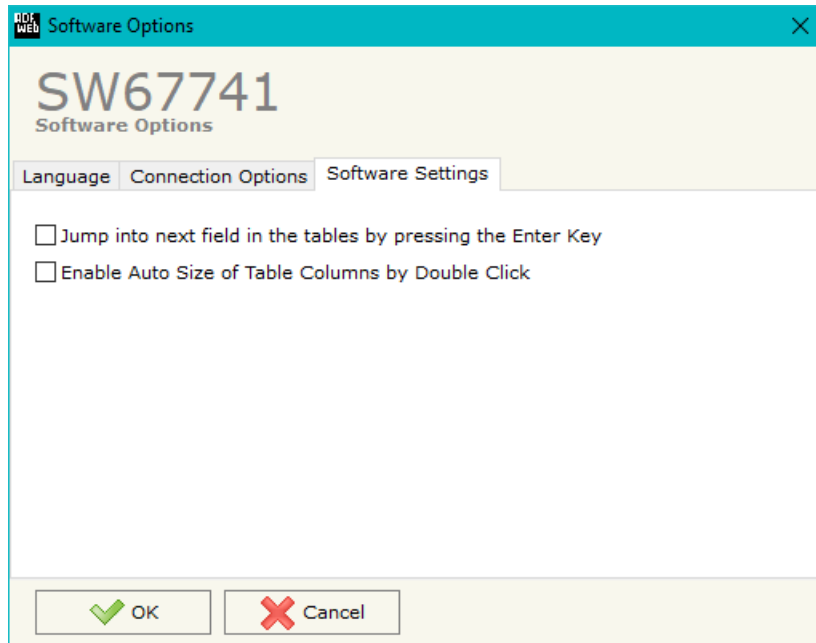

In the section "Software Settings", it is possible to enable/disable some keyboard's commands for an easier navigation inside the tables contained in the different sections of the software.

## SET COMMUNICATION:

This section defines the fundamental communication parameter of two buses, IEC61850 and DeviceNet.


By pressing the **"Set Communication"** button from the main window of SW67741 (Fig. 2) the window "Set Communication" appears (Fig. 3).

The means of the fields for "Ethernet Connection" are:

- In the field **"Device Name (Hostname)"** the Hostname to assign to the converter is defined;
- If the field **"Obtain an IP Address Automatically (DHCP for Cable Connection)"** is checked, DHCP for LAN connection is enabled;
- If the field **"Enable DNS"** is checked, DNS protocol is enabled;
- In the field **"Primary DNS"** the IP Address of the primary DNS server is defined;
- In the field **"Secondary DNS"** the IP Address of the secondary DNS server is defined.

The means of the fields for "S7comm" are:

- In the fields **"IP ADDRESS"** the IP address for IEC61850 side of the converter is defined;
- In the fields **"SUBNET Mask"** the SubNet Mask for IEC61850 side of the converter is defined;
- In the fields **"GATEWAY"** the default gateway of the net is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field **"Port"** the port used for IEC61850 communication is defined;
- In the field **"Password"** the password used for accessing to IEC61850 variables is defined.
- In the field **"Name of Server"** the name assigned to the converter is defined.

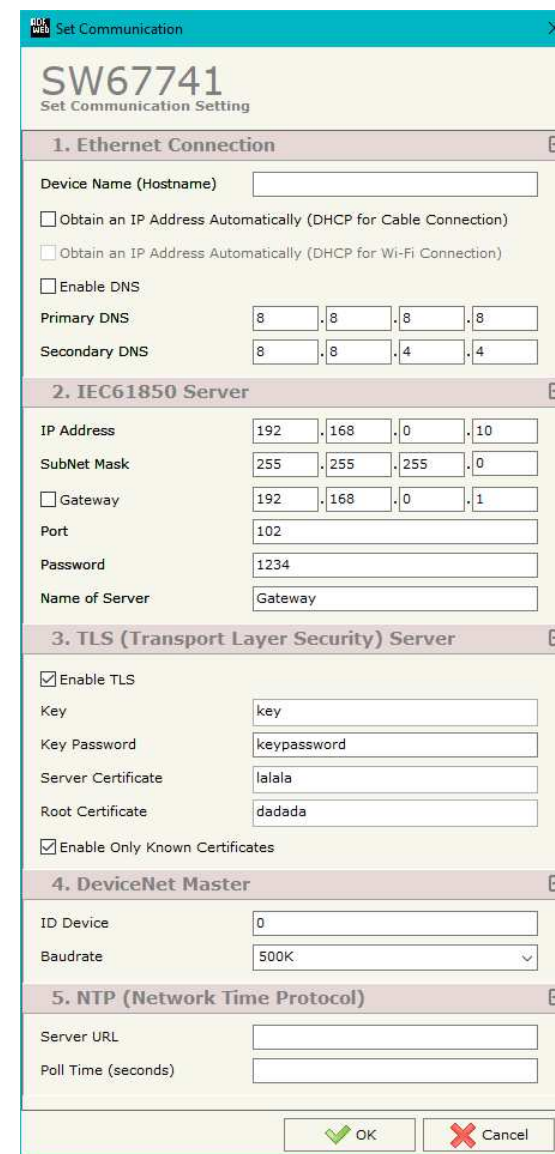

The screenshot shows the 'Set Communication' window for device SW67741. The window is organized into five main sections:

- 1. Ethernet Connection:** Includes fields for Device Name (Hostname), checkboxes for DHCP (Cable and Wi-Fi), Enable DNS, and IP address fields for Primary and Secondary DNS.
- 2. IEC61850 Server:** Includes IP Address, SubNet Mask, a checkbox for Gateway, Port, Password, and Name of Server.
- 3. TLS (Transport Layer Security) Server:** Includes a checkbox for Enable TLS, and fields for Key, Key Password, Server Certificate, Root Certificate, and a checkbox for Enable Only Known Certificates.
- 4. DeviceNet Master:** Includes ID Device and Baudrate fields.
- 5. NTP (Network Time Protocol):** Includes Server URL and Poll Time (seconds) fields.

At the bottom right, there are 'OK' and 'Cancel' buttons.

Figure 3: "Set Communication" window



The means of the fields for the "TLS" section are:

- If the field "**Enable TLS**" is checked, the TLS protocol for secure connection is enabled;
- In the field "**Key**" the key for the authentication is defined;
- In the field "**Key Password**" the password for decrypting the key is defined;
- In the field "**Server Certificate**" the certificate for the server is defined;
- In the field "**Root Certificate**" the root of the server is defined;
- If the field "**Enable Only Known Certificates**" is checked, the converter will accept just connection from known Clients (defined in the section "TLS Known Certificate").

The means of the fields for the "DeviceNet Master" section are:

- In the field "**ID Device**" the address for the DeviceNet Master is defined;
- In the field "**Baud Rate**" the data rate of the DeviceNet bus is defined.


The means of the fields for "NTP" are:

- In the field "**Server URL**" the URL or the IP Address of the NTP Server is defined;
- In the field "**Poll Time (seconds)**" the polling time for the time synchronization is defined.

## IEC61850 ACCESS:

By Pressing the “**IEC 61850 Access**” button from the main window for SW67741 (Fig. 2) the window “Set Variables Access for IEC 61850” appears (Fig. 4).

This section is used to define the IEC61850 variables from/to which take/map the data of DeviceNet side.

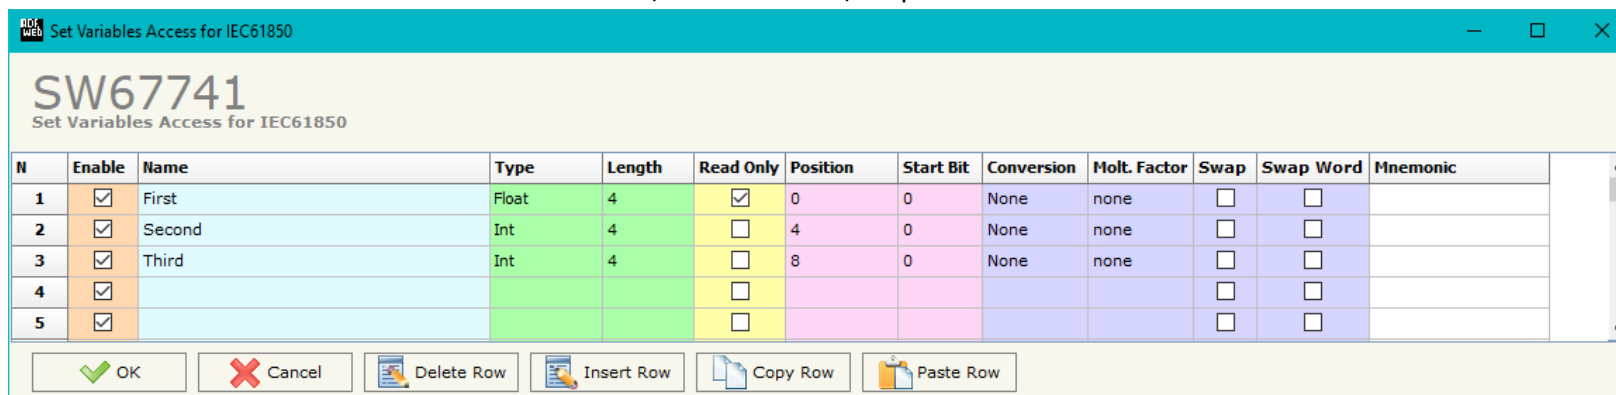

N	Enable	Name	Type	Length	Read Only	Position	Start Bit	Conversion	Molt. Factor	Swap	Swap Word	Mnemonic
1	<input checked="" type="checkbox"/>	First	Float	4	<input checked="" type="checkbox"/>	0	0	None	none	<input type="checkbox"/>	<input type="checkbox"/>	
2	<input checked="" type="checkbox"/>	Second	Int	4	<input type="checkbox"/>	4	0	None	none	<input type="checkbox"/>	<input type="checkbox"/>	
3	<input checked="" type="checkbox"/>	Third	Int	4	<input type="checkbox"/>	8	0	None	none	<input type="checkbox"/>	<input type="checkbox"/>	
4	<input checked="" type="checkbox"/>				<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	
5	<input checked="" type="checkbox"/>				<input type="checkbox"/>					<input type="checkbox"/>	<input type="checkbox"/>	

Figure 4: “IEC 61850 Access” window

The means of the fields are:


- If the field “**Enable**” is checked, the IEC 61850 variable is enabled;
- In the field “**Name**” the name of the IEC 61850 variable is defined;
- In the field “**Type**” the data format of the IEC 61850 variable is defined;
- In the field “**Length**” the dimension of the IEC 61850 variable is defined;
- If the field “**Read Only**” is checked, the IEC 61850 variable is just in reading. Otherwise, it is writeable too;
- In the field “**Position**” the starting byte of the internal memory arrays from/to which taking/mapping the data is defined;
- In the field “**Start Bit**” the starting bit of the byte of the field “Position” is defined;
- In the field “**Conversion**” the conversion of the data is defined. This option is used to convert the data format between DeviceNet and IEC 61850;
- In the field “**Molt. Factor**” a multiplicative factor of the value is defined;
- If the field “**Swap**” is checked, the bytes’ order is reversed;
- If the field “**Swap World**” is checked, the words’ order is reversed;
- In the field “**Mnemonic**” a description of the variable is defined.

**DEVICENET NETWORK:**

By pressing the “**DeviceNet Network**” button from the main window for SW67741 (Fig. 2) the window “DeviceNet Network” appears (Fig. 5).

The data of the columns have the following meanings:

- In the field “**ID**” the ID of the DeviceNet Slave is defined;
- In the field “**Num Byte In**” the number of input byte of the DeviceNet Slave is defined;
- In the field “**Num Byte Out**” the number of output byte of the DeviceNet Slave is defined;
- In the field “**Mnemonic**” a description is defined.

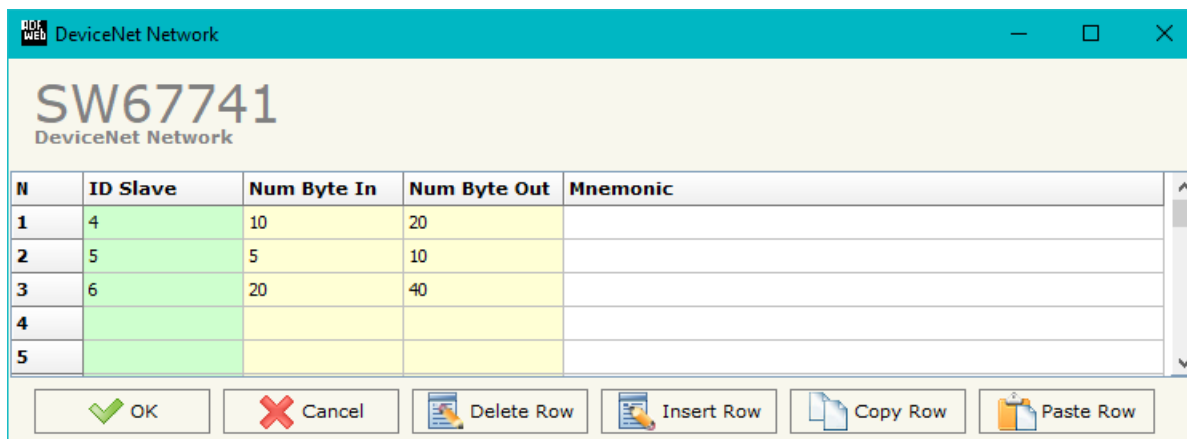

N	ID Slave	Num Byte In	Num Byte Out	Mnemonic
1	4	10	20	
2	5	5	10	
3	6	20	40	
4				
5				

Figure 5: “DeviceNet Network” window

**DEFINE BYTE:**

By pressing the **Define Byte** button from the main window for SW67741 (Fig. 2) the window "Define Offset" appears (Fig. 6).

In the field "Select the Slave DeviceNet" it is possible to select the slave to configure between the ones defined in the "DeviceNet Network" section.

The data of the column have the following meanings:

Byte In side:

- In the column **Offset** it is possible to link the DeviceNet bytes in Input of the Slave to the internal memory array;
- In the column **Mnemonic** a description is defined.

Byte Out side:

- In the column **Offset** it is possible to link the DeviceNet bytes in Output of the Slave to the internal memory array;
- In the column **Mnemonic** a description is defined.

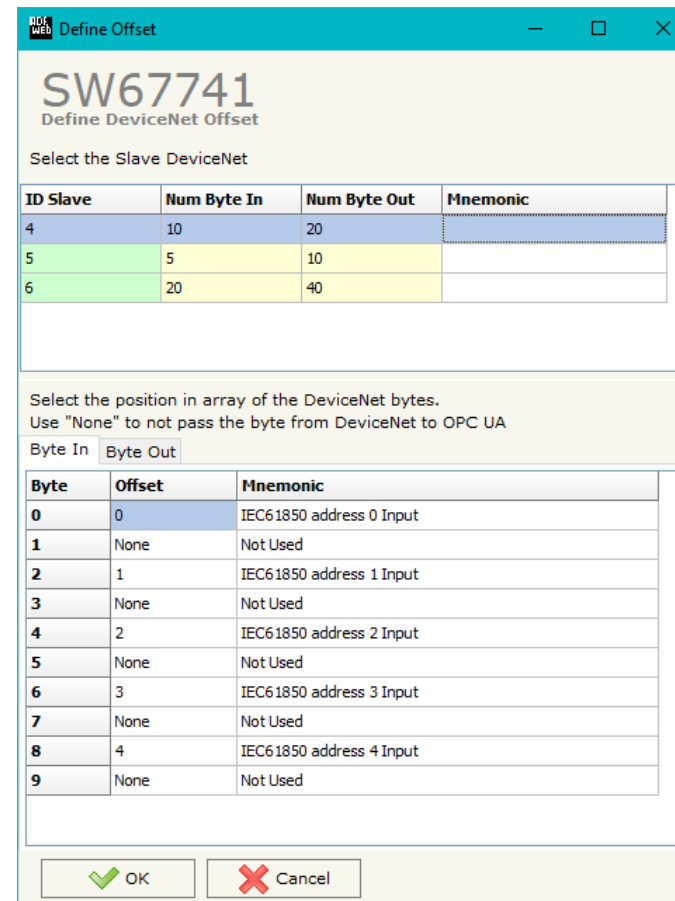


Figure 6: "Define Offset" window

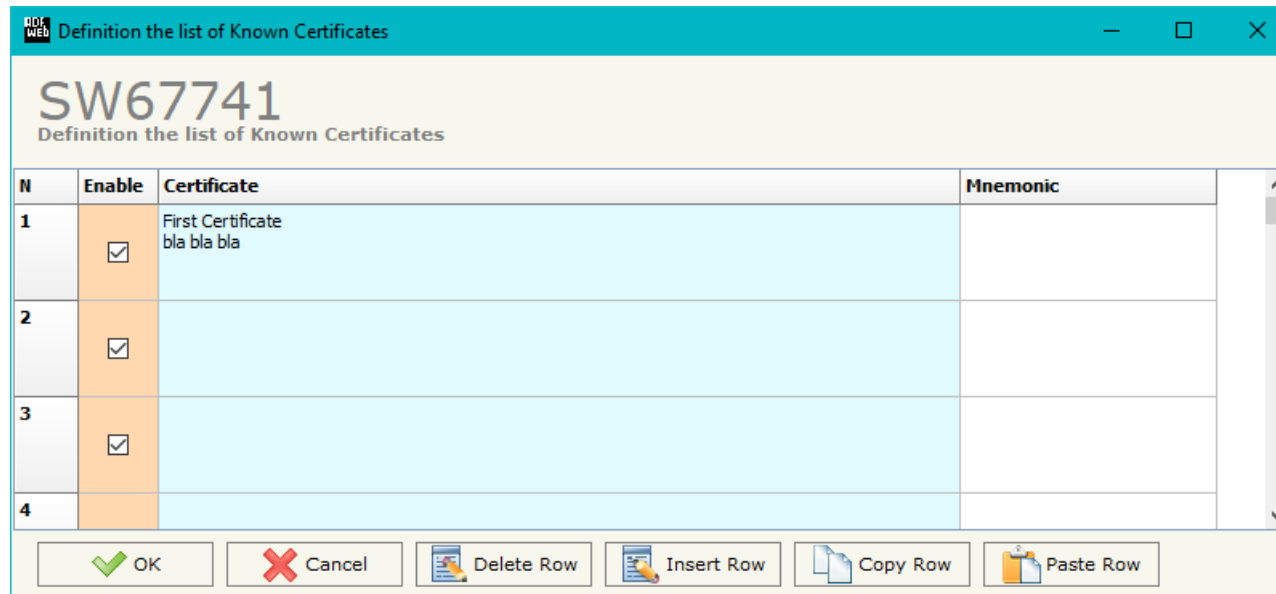
**TLS KNOWN CERTIFICATE:**

Figure 7: "TLS Known Certificate" window

By pressing the "**TLS Known Certificate**" button from the Main Window of SW67741 (Fig. 2) the "Definition the list of Known Certificates" window appears (Fig. 7).

The data of the columns have the following meanings:

- If the field "**Enable**" is checked, the TLS certificate is allowed;
- In the field "**Certificate**" the certificate of the Client is defined;
- In the field "**Mnemonic**" a description is defined.

### UPDATE DEVICE:

By pressing the “**Update Device**” button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary. This by using the Ethernet port.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in ON position;
- Turn ON the device
- Connect the Ethernet cable;
- Insert the IP “**192.168.2.205**”;
- Select which operations you want to do;
- Press the “**Execute update firmware**” button to start the upload;
- When all the operations are “OK” turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in OFF position;
- Turn ON the device.

If you know the actual IP address of the device, you have to use this procedure:

- Turn ON the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Select which operations you want to do;
- Press the “**Execute update firmware**” button to start the upload;
- When all the operations are “OK” the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly updated.

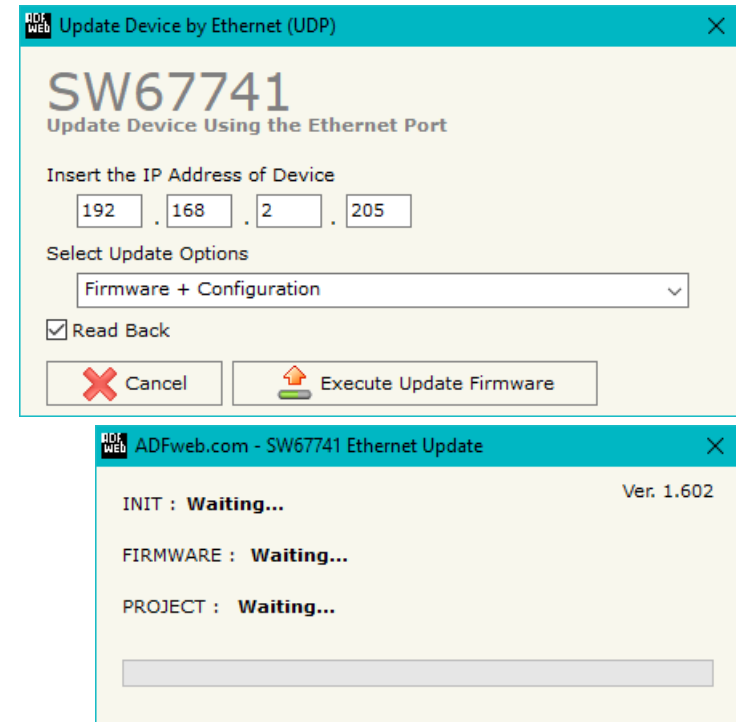


Figure 8: “Update device” windows



**Note:**

When you receive the device, for the first time, you also have to update the Firmware in the HD67741 device.



**Warning:**

If Fig. 9 appears when you try to do the Update try these points before seeking assistance:

- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- Check the LAN settings;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven, Vista, 8, 10 or 11 make sure that you have the administrator privileges;
- In case you have to program more than one device, using the "UDP Update", you have to cancel the ARP table every time you connect a new device on Ethernet. For do this you have to launch the "Command Prompt" and write the command "arp -d". Pay attention that with Windows Vista, Seven, 8, 10, 11 you have to launch the "Command Prompt" with Administrator Rights;
- Pay attention at Firewall lock.

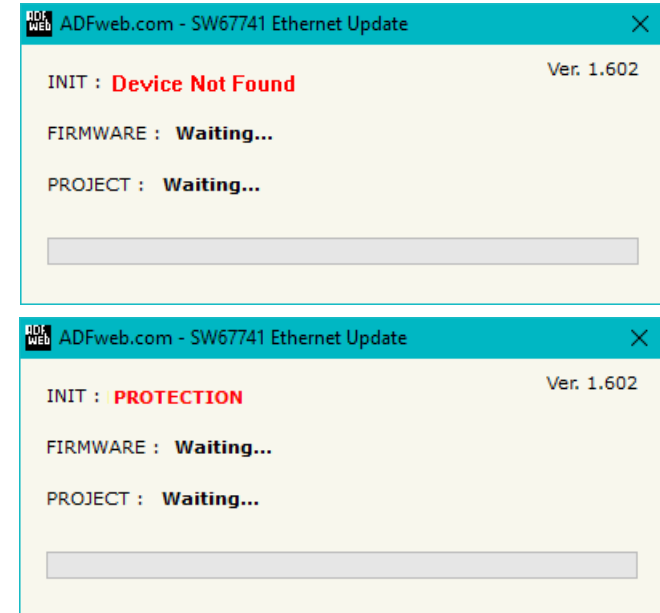



Figure 9: "Error" window



**Warning:**

In the case of HD67741 you have to use the software "SW67741": [www.adfweb.com/download/filefold/SW67741.zip](http://www.adfweb.com/download/filefold/SW67741.zip).

**MECHANICAL DIMENSIONS:**

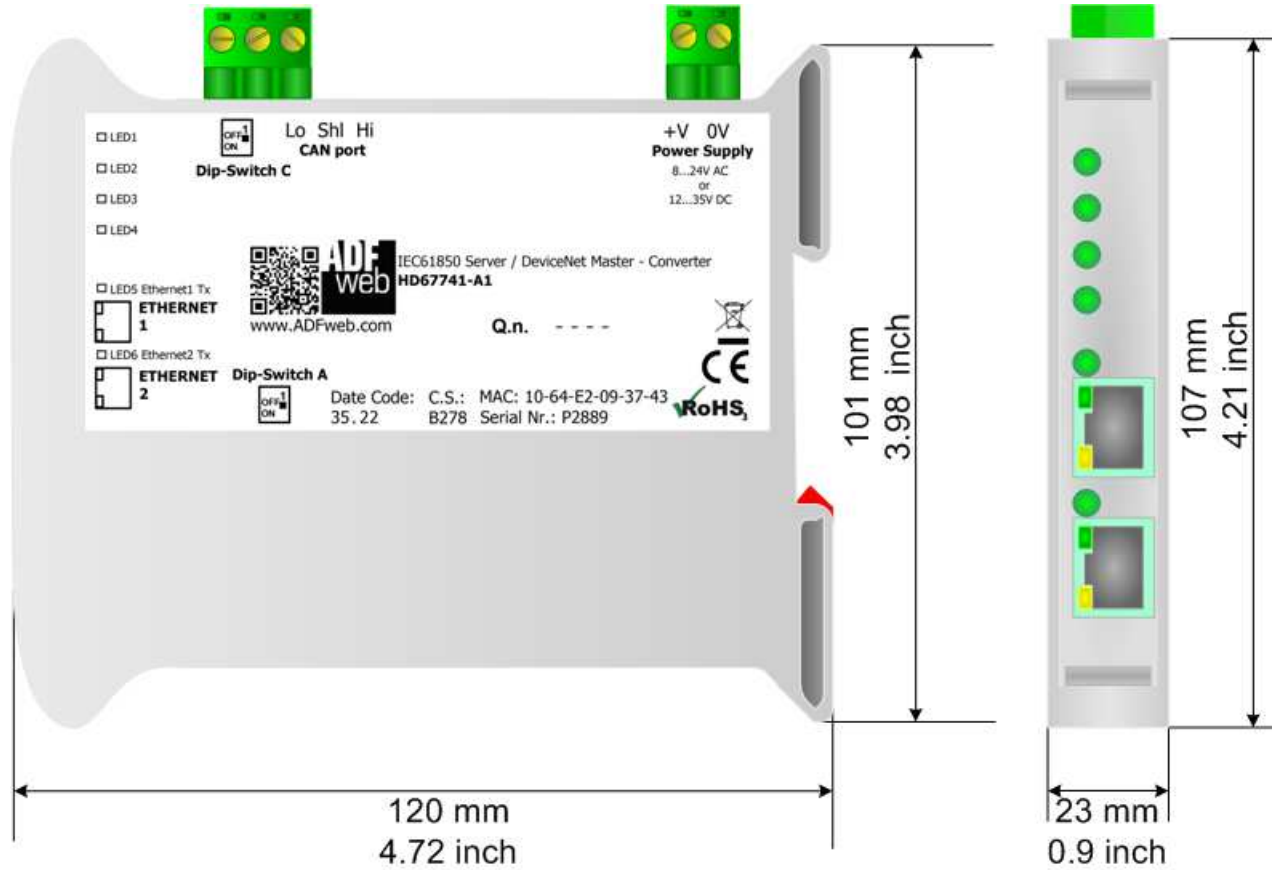

Housing: PVC  
Weight: 200g (Approx)


Figure 10: Mechanical dimensions scheme for HD67741-A1



**ORDERING INFORMATIONS:**

The ordering part number is formed by a valid combination of the following:

**HD67741 - xx**

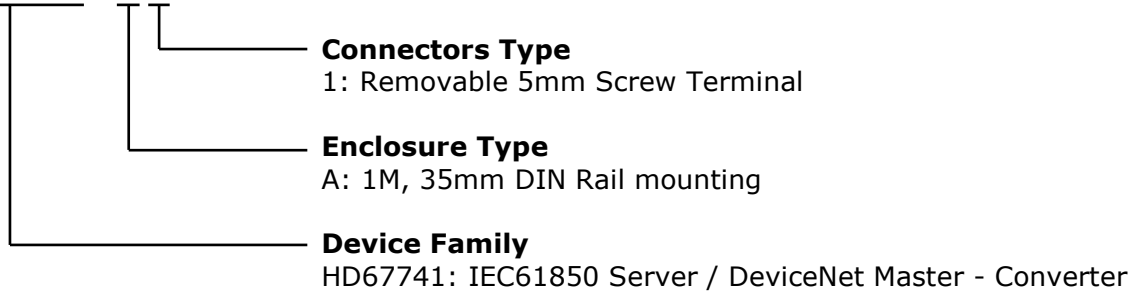

Order Code: **HD67741-A1** - IEC61850 Server / DeviceNet Master - Converter

**ACCESSORIES:**

Order Code: **AC34011** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V DC

Order Code: **AC34012** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 24 V DC

**DISCLAIMER:**

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

**OTHER REGULATIONS AND STANDARDS:****WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

— This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE**

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

**CE MARKING**

The product conforms with the essential requirements of the applicable EC directives.

**WARRANTIES AND TECHNICAL SUPPORT:**

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at [www.adfweb.com](http://www.adfweb.com).  
Otherwise contact us at the address [support@adfweb.com](mailto:support@adfweb.com)

**RETURN POLICY:**

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at [www.adfweb.com](http://www.adfweb.com). Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



**ADFweb.com S.r.l.**  
Via Strada Nuova, 17  
IT-31010 Mareno di Piave  
TREVISO (Italy)  
Phone +39.0438.30.91.31  
Fax +39.0438.49.20.99  
[www.adfweb.com](http://www.adfweb.com)

